


Membranventil

Metall, DN 15 - 150

Diaphragm Valve

Metal, DN 15 - 150

- Ⓓ ORIGINAL EINBAU- UND MONTAGEANLEITUNG
- ⒼB INSTALLATION, OPERATING AND MAINTENANCE INSTRUCTIONS

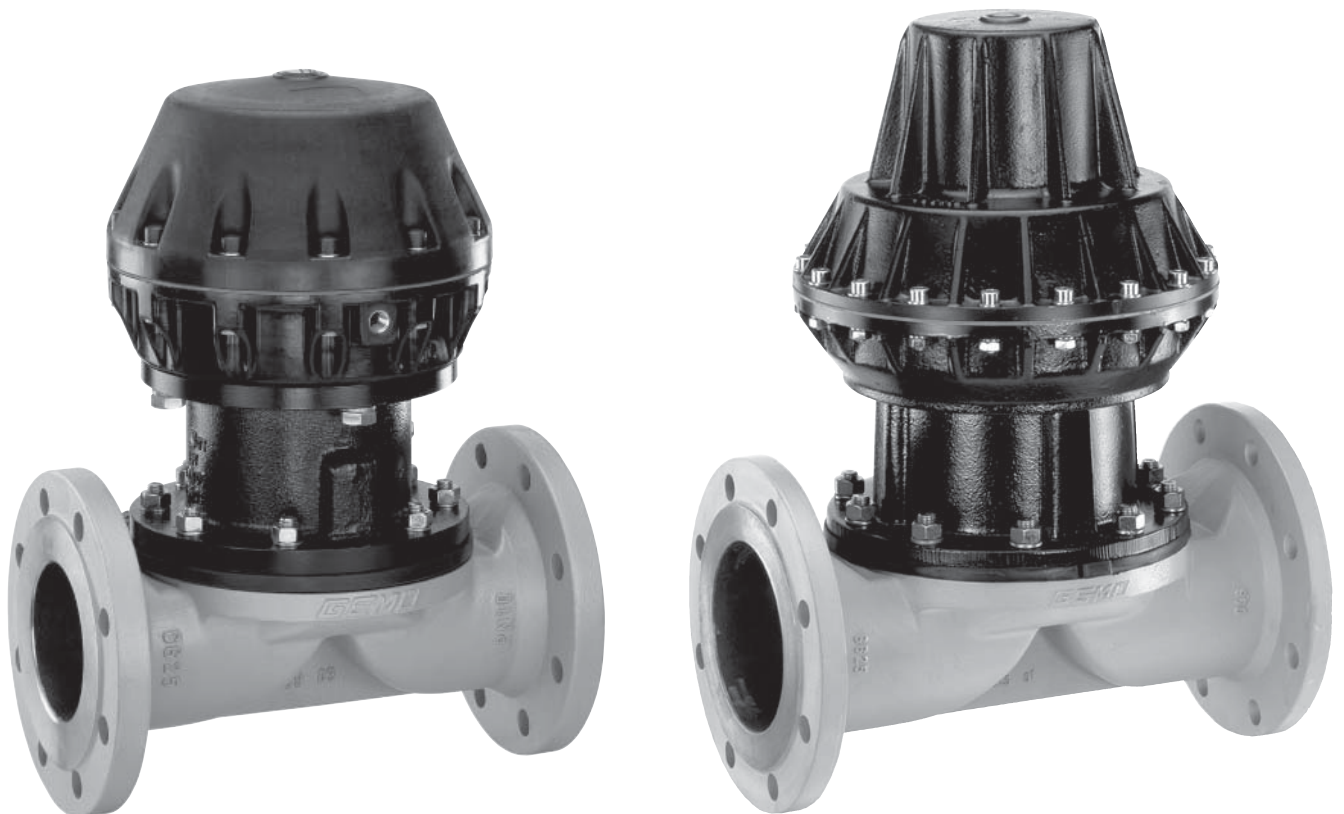



Inhaltverzeichnis

1	Allgemeine Hinweise	
2	Allgemeine Sicherheitshinweise	
2.1	Hinweise für Service- und Bedienpersonal	
2.2	Warnhinweise	
2.3	Verwendete Symbole	
2.4	Sicherheitshinweis am Produkt	
3	Begriffsbestimmungen	
4	Vorgesehener Einsatzbereich	
5	Technische Daten	
6	Bestelldaten	
7	Herstellerangaben	
7.1	Transport	
7.2	Lieferung und Leistung	
7.3	Lagerung	
7.4	Benötigtes Werkzeug	
8	Funktionsbeschreibung	
9	Geräteaufbau	
9.1	Typenschild	
10	Montage und Bedienung	
10.1	Montage des Ventils	
10.2	Steuerfunktionen	
10.3	Steuermedium anschließen	
11	Montage / Demontage von Ersatzteilen	
11.1	Demontage Ventil (Antrieb vom Körper lösen)	
11.2	Demontage Membrane	
11.3	Montage Membrane	
11.3.1	Allgemeines	
11.3.2	Montage der Konkav-Membrane	
11.3.3	Montage der Konvex-Membrane	
11.4	Montage Antrieb auf Ventilkörper	
12	Inbetriebnahme	
13	Inspektion und Wartung	
14	Demontage	
15	Entsorgung	
15.1	Demontage zur Entsorgung für Steuerfunktion 1	
16	Rücksendung	
17	Hinweise	
18	Fehlersuche / Störungsbehebung	
19	Schnittbilder und Ersatzteile	
20	Einbauerklärung	
21	EU-Konformitätserklärung	

1 Allgemeine Hinweise

- Voraussetzungen für die einwandfreie Funktion des GEMÜ-Ventils:
- x Sachgerechter Transport und Lagerung
 - x Installation und Inbetriebnahme durch eingewiesenes Fachpersonal
 - x Bedienung gemäß dieser Einbau- und Montageanleitung
 - x Ordnungsgemäße Instandhaltung
- Korrekte Montage, Bedienung und Wartung oder Reparatur gewährleisten einen störungsfreien Betrieb des Ventils.

	Beschreibungen und Instruktionen beziehen sich auf Standardausführungen. Für Sonderausführungen, die in dieser Einbau- und Montageanleitung nicht beschrieben sind, gelten die grundsätzlichen Angaben in dieser Einbau- und Montageanleitung in Verbindung mit einer zusätzlichen Sonderdokumentation.
---	---

	Alle Rechte wie Urheberrechte oder gewerbliche Schutzrechte werden ausdrücklich vorbehalten.
---	--

2 Allgemeine Sicherheitshinweise

- Die Sicherheitshinweise berücksichtigen nicht:
- x Zufälligkeiten und Ereignisse, die bei Montage, Betrieb und Wartung auftreten können.
 - x die ortsbezogenen Sicherheitsbestimmungen, für deren Einhaltung – auch seitens des hinzugezogenen Montagepersonals – der Betreiber verantwortlich ist.

2.1 Hinweise für Service- und Bedienpersonal

Die Einbau- und Montageanleitung enthält grundlegende Sicherheitshinweise, die bei Inbetriebnahme, Betrieb und Wartung zu beachten sind. Nichtbeachtung kann zur Folge haben:

- x Gefährdung von Personen durch elektrische, mechanische und chemische Einwirkungen.
- x Gefährdung von Anlagen in der Umgebung.
- x Versagen wichtiger Funktionen.
- x Gefährdung der Umwelt durch Austreten gefährlicher Stoffe bei Leckage.

Vor Inbetriebnahme:

- Einbau- und Montageanleitung lesen.
- Montage- und Betriebspersonal ausreichend schulen.
- Sicherstellen, dass der Inhalt der Einbau- und Montageanleitung vom zuständigen Personal vollständig verstanden wird.
- Verantwortungs- und Zuständigkeitsbereiche regeln.

Bei Betrieb:

- Einbau- und Montageanleitung am Einsatzort verfügbar halten.
- Sicherheitshinweise beachten.
- Nur entsprechend der Leistungsdaten betreiben.
- Wartungsarbeiten bzw. Reparaturen, die nicht in der Einbau- und Montageanleitung beschrieben sind dürfen nicht ohne vorherige Abstimmung mit dem Hersteller durchgeführt werden.

GEFÄHR

Sicherheitsdatenblätter bzw. die für die verwendeten Medien geltenden Sicherheitsvorschriften unbedingt beachten!

Bei Unklarheiten:

- x Bei nächstgelegener GEMÜ-Verkaufsniederlassung nachfragen.

2.2 Warnhinweise

Warnhinweise sind, soweit möglich, nach folgendem Schema gegliedert:

SIGNALWORT

Art und Quelle der Gefahr

- Mögliche Folgen bei Nichtbeachtung.
- Maßnahmen zur Vermeidung der Gefahr.

Warnhinweise sind dabei immer mit einem Signalwort und teilweise auch mit einem gefahrenspezifischen Symbol gekennzeichnet.

Folgende Signalwörter bzw.

Gefährdungsstufen werden eingesetzt:

GEFÄHR

Unmittelbare Gefahr!

- Bei Nichtbeachtung sind Tod oder schwerste Verletzungen die Folge.

WARNUNG

Möglicherweise gefährliche Situation!

- Bei Nichtbeachtung drohen schwerste Verletzungen oder Tod.

VORSICHT

Möglicherweise gefährliche Situation!





- Bei Nichtbeachtung drohen mittlere bis leichte Verletzungen.

VORSICHT (OHNE SYMBOL)


Möglicherweise gefährliche Situation!


- Bei Nichtbeachtung drohen Sachschäden.

2.3 Verwendete Symbole

	Gefahr durch heiße Oberflächen!
	Gefahr durch ätzende Stoffe!
	Gefahr durch Federdruck!
	Hand: Beschreibt allgemeine Hinweise und Empfehlungen.
●	Punkt: Beschreibt auszuführende Tätigkeiten.
➤	Pfeil: Beschreibt Reaktion(en) auf Tätigkeiten.
x	Aufzählungszeichen

2.4 Sicherheitshinweis am Produkt

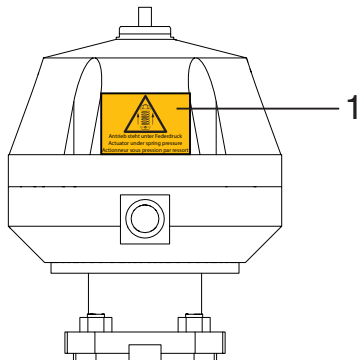

1		Antrieb steht unter Federdruck. <ul style="list-style-type: none"> ● Antrieb nur unter Presse öffnen.
---	---	---

Der Aufkleber am Produkt ist im Auslieferungszustand in den Sprachen Deutsch, Englisch und Französisch. Bei der Verwendung in einem anderssprachigen Land muss dieser entsprechend der Sprache angebracht werden (siehe Kapitel 7.2 "Lieferung und Leistung").

Fehlende oder unleserliche Aufkleber am Produkt müssen angebracht oder ersetzt werden.

Falls der Aufkleber in anderen, nicht bei- liegenden, Sprachen benötigt wird, muss dieser kundenseitig in Eigenverantwortung hergestellt und angebracht werden.

3 Begriffsbestimmungen

Betriebsmedium

Medium, das durch das Ventil fließt.

Steuermedium

Medium mit dem durch Druckaufbau oder Druckabbau das Ventil angesteuert und betätigt wird.

Steuerfunktion

Mögliche Betätigungsfunktionen des Ventils.

4 Vorgesehener Einsatzbereich

- x Das GEMÜ-Membranventil 620 ist für den Einsatz in Rohrleitungen konzipiert. Es steuert ein durchfließendes Medium indem es durch ein Steuermedium geschlossen oder geöffnet werden kann.
- x **Das Ventil darf nur gemäß den technischen Daten eingesetzt werden (siehe Kapitel 5 "Technische Daten").**
- x Schrauben und Kunststoffteile am Ventil nicht lackieren!

⚠ WARNUNG

Ventil nur bestimmungsgemäß einsetzen!

- Sonst erlischt Herstellerhaftung und Gewährleistungsanspruch.
- Das Ventil ausschließlich entsprechend den in der Vertragsdokumentation und in der Einbau- und Montageanleitung festgelegten Betriebsbedingungen verwenden.
- Das Ventil darf nur in explosionsgefährdeten Zonen verwendet werden, die auf der Konformitätserklärung (ATEX) bestätigt wurden.

5 Technische Daten

Betriebs- / Steuerdruck [bar]						
		Steuerfunktion 1				Steuerdruck für max. Hub
		Antriebsgröße	Betriebsdruck			
MG	DN	Code	EPDM/FKM	PTFE		
25	15	0/N	0 - 10	0 - 6	5,5 - 7,0	
	20					
	25					
40	32	1/N	0 - 10	0 - 6	5,5 - 7,0	
	40					
50	50	2/N	0 - 10	0 - 6	5,5 - 7,0	
65	65	3/1	0 - 3	0 - 2	2,6 - 7,0	
	65	3A1	0 - 3	0 - 2	3,0 - 7,0	
	65	3/2	0 - 6	0 - 4	4,5 - 7,0	
	65	3A2	0 - 6	0 - 4	4,5 - 7,0	
	65	3/3	0 - 10	0 - 6	5,5 - 7,0	
	65	3A3	0 - 10	0 - 6	6,0 - 7,0	
80	80	3/2	0 - 3	0 - 2	4,5 - 7,0	
	80	3A2	0 - 3	0 - 2	5,0 - 7,0	
	80	3/3	0 - 7	0 - 5	5,6 - 7,0	
	80	3A3	0 - 7	0 - 5	6,5 - 7,0	
	80	4A2	0 - 10	0 - 6	3,5 - 7,0	
100	100	3/3	0 - 6	0 - 4	6,2 - 7,0	
	100	3A3	0 - 6	0 - 4	6,5 - 7,0	
	100	4A3	0 - 10	0 - 6	4,5 - 7,0	
125	125	4A2	0 - 5	0 - 3	4,0 - 7,0	
	125	4A3	0 - 8	0 - 5	5,5 - 7,0	
150	150	4A3	0 - 6	0 - 4	5,5 - 7,0	

Sämtliche Druckwerte sind in bar - Überdruck. Betriebsdruckangaben wurden mit statisch einseitig anstehenden Betriebsdruck bei geschlossenem Ventil ermittelt. Für die angegebenen Werte ist die Dichtheit am Ventilsitz und nach außen gewährleistet. Angaben zu beidseitig anstehenden Betriebsdrücken und für Reinstmedien auf Anfrage. Höhere Betriebsdrücke auf Anfrage.
MG = Membrangröße

Betriebs- / Steuerdruck [bar]									
		Steuerfunktion 2				Steuerfunktion 3			
		Antriebsgröße	Betriebsdruck		Steuerdruck siehe Diagramm	Antriebsgröße	Betriebsdruck		Steuerdruck siehe Diagramm
MG	DN	Code	EPDM/FKM	PTFE		Code	EPDM/FKM	PTFE	
25	15	0/F	0 - 10	0 - 6	max. 5,5	0/D	0 - 10	0 - 6	max. 5,5
	20								
	25								
40	32	1/F	0 - 10	0 - 6	max. 5,5	1/D	0 - 10	0 - 6	max. 5,5
	40								
50	50	2/F	0 - 10	0 - 6	max. 5,0	2/D	0 - 10	0 - 6	max. 5,0
65	65	3/F 3AF	0 - 10	0 - 6	max. 4,5	3/D 3AD	0 - 10	0 - 6	max. 4,0
	65								
	65								
	65								
	65								
	65								
80	80	3/F 3AF	0 - 10	0 - 6	max. 5,5	3/D 3AD	0 - 10	0 - 6	max. 5,0
	80								
	80								
	80								
	80								
100	100	3/F	0 - 6	0 - 4	max. 5,0	3/D	0 - 6	0 - 4	max. 4,5
	100	3AF	0 - 6	0 - 4	max. 5,0	3AD	0 - 6	0 - 4	max. 4,5
	100	4AF	0 - 10	0 - 6	max. 3,5	4AD	0 - 10	0 - 6	max. 3,0
125	125	4AF	0 - 10	0 - 6	max. 4,5	4AD	0 - 10	0 - 6	max. 4,0
	125								
150	150	4AF	0 - 8	0 - 5	max. 4,5	4AD	0 - 8	0 - 5	max. 4,0

Sämtliche Druckwerte sind in bar - Überdruck. Betriebsdruckangaben wurden mit statisch einseitig anstehenden Betriebsdruck bei geschlossenem Ventil ermittelt. Für die angegebenen Werte ist die Dichtheit am Ventilsitz und nach außen gewährleistet. Angaben zu beidseitig anstehenden Betriebsdrücken und für Reinstmedien auf Anfrage. Höhere Betriebsdrücke auf Anfrage.

Betriebsmedium	
Aggressive, neutrale, gasförmige und flüssige Medien, die die physikalischen und chemischen Eigenschaften des jeweiligen Gehäuse- und Membranwerkstoffes nicht negativ beeinflussen.	
Max. zul. Temperatur des Betriebsmediums (je nach Medium, Membran- und Ventilkörperwerkstoff)	150 °C

Umgebungsbedingungen	
Umgebungstemperatur	0 bis 60 °C


Steuermedium	
Neutrale Gase	
Max. zul. Temperatur des Steuermediums	40 °C

Füllvolumen	
Antriebsgröße 0	0,15 dm ³
Antriebsgröße 1	0,35 dm ³
Antriebsgröße 2	1,10 dm ³
Antriebsgröße 3	2,5 dm ³
Antriebsgröße 4	6,8 dm ³


Kv-Wert [m ³ /h]				
MG	DN	GG 25	PFA / PP	Hartgummi
25	15	7	5	6
	20	14	9	11
	25	20	13	15
40	32	36	23	29
	40	40	26	32
50	50	80	47	64
65	65	100	72	80
	65			
	65			
	65			
	65			
80	80	160	110	128
	80			
	80			
	80			
100	100	238	177	190
	100			
	100			
125	125	270	214	230
	125			
150	150	480	365	397

Kv-Werte ermittelt gemäß DIN EN 60534, Eingangsdruck 5 bar, Δp 1 bar, Ventilkörperwerkstoff Grauguss EN-GJL-250 mit Anschluss Flansch EN 1092 Baulänge EN 558 Reihe 1 und Weichelastomermembrane.
 Die Kv-Werte für andere Produktkonfigurationen (z. B. andere Membran- oder Körperwerkstoffe) können abweichen. Im allgemeinen unterliegen alle Membranen den Einflüssen von Druck, Temperatur, des Prozesses und den Drehmomenten mit denen diese angezogen werden. Dadurch können die Kv-Werte über die Toleranzgrenze der Norm hinaus abweichen.
 MG = Membrangröße


**Betriebsdruck - Steuerdruck
Antrieb 0/F, 1/F, 2F**

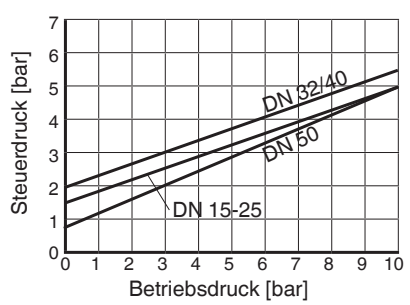

**Betriebsdruck - Steuerdruck
Antrieb 3/F, 3AF**

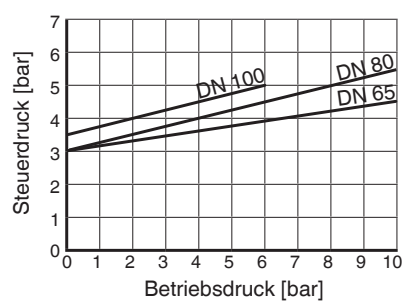

**Betriebsdruck - Steuerdruck
Antrieb 4AF**

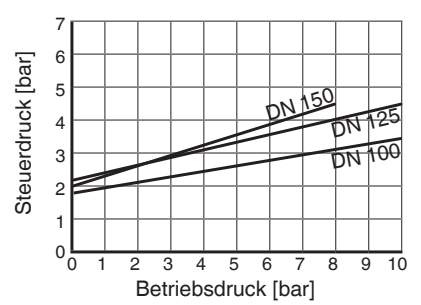

Hinweis: In oben stehenden Diagrammen ist bei den Antrieben "unter Federkraft geöffnet" (St.f. 2) der minimal notwendige Steuerdruck in Abhängigkeit vom Betriebsdruck angegeben.

6 Bestelldaten

Gehäuseform	Code
Durchgang	D

Anschlussart	Code
Gewindeanschluss	
Gewindemuffe DIN ISO 228	1
Flansch	
Flansch EN 1092 / PN16 / Form B, Baulänge EN 558, Reihe 1, ISO 5752, basic series 1	8
Flansch ANSI Class 125/150 RF, Baulänge MSS SP-88	38
Flansch ANSI Class 125/150 RF, Baulänge EN 558, Reihe 1, ISO 5752, basic series 1	39
Flansch BS 10 Tab "E", Baulänge EN 558, Reihe 7, ISO 5752, basic series 7	51
Flansch EN 1092 / PN16 / Form A, Baulänge EN 558, Reihe 7, ISO 5752, basic series 7	53
Flansch ANSI Class 125/150 RF, Baulänge EN 558, Reihe 7, ISO 5752, basic series 7	56
Die technischen Angaben für die Anschlussarten beziehen sich auf die Abmessungen der Flansche und nicht auf den Betriebsdruck. Betriebsdrücke siehe Technische Daten.	

Ventilkörperwerkstoff	Code
EN-GJL-250 (GG 25)	8
EN-GJS-400-18-LT (GGG 40.3) PFA-Auskleidung	17
EN-GJS-400-18-LT (GGG 40.3) PP-Auskleidung	18
EN-GJS-500-7 (GGG 50) PFA-Auskleidung	81
EN-GJS-400-18-LT (GGG 40.3) Hartgummi-Auskleidung	83
EN-GJS-500-7 (GGG 50) PP-Auskleidung	91

Membranwerkstoff	Code
NBR	2
FKM	4
CR	8
EPDM	29
PTFE/EPDM, einteilig	54
PTFE/EPDM, zweiteilig	5M*
*Verwendung für Ventilkörper siehe Seite 11	

Steuerfunktion	Code
Federkraft geschlossen (NC)	1
Federkraft geöffnet (NO)	2
Beidseitig angesteuert (DA)	3

Antriebsausführung					Code
Material Antriebskopf: Kunststoff					
MG	DN	Stf. 1	Stf. 2	Stf. 3	
25	15 - 25	0/N	0/F	0/D	
40	32 + 40	1/N	1/F	1/D	
50	50	2/N	2/F	2/D	
65 - 100	65 - 100	3/1, 3/2, 3/3	3/F	3/D	
Material Antriebskopf: Metall					
MG	DN	Stf. 1	Stf. 2	Stf. 3	
65 - 100	65 - 100	3A1, 3A2, 3A3	3AF	3AD	
80 - 150	80 - 150	4A2, 4A3	4AF	4AD	
MG = Membrangröße					

Bestellbeispiel	620	80	D	8	8	29	1	3/3
Typ	620							
Nennweite		80						
Gehäuseform (Code)			D					
Anschlussart (Code)				8				
Ventilkörperwerkstoff (Code)					8			
Membranwerkstoff (Code)						29		
Steuerfunktion (Code)							1	
Antriebsausführung (Code)								3/3

Andere Anschlussarten, Ventilkörperwerkstoffe, Auskleidungen und Membranwerkstoffe auf Anfrage

7 Herstellerangaben

7.1 Transport

- Ventil nur auf geeignetem Lademittel transportieren, nicht stürzen, vorsichtig handhaben.
- Verpackungsmaterial entsprechend den Entsorgungsvorschriften / Umweltschutzbestimmungen entsorgen.

7.2 Lieferung und Leistung

- Ware unverzüglich bei Erhalt auf Vollständigkeit und Unversehrtheit überprüfen.
- Lieferumfang aus Versandpapieren, Ausführung aus Bestellnummer ersichtlich.
- Auslieferungszustand des Ventils:

Steuerfunktion:	Zustand:
1 Federkraft geschlossen (NC)	geschlossen
2 Federkraft geöffnet (NO)	geöffnet
3 Beidseitig angesteuert (DA)	undefiniert

- Das Ventil wird im Werk auf Funktion geprüft.
- Aufkleber mit Warnhinweisen in weiteren Sprachen.



7.3 Lagerung

- Ventil staubgeschützt und trocken in Originalverpackung lagern.
- UV-Strahlung und direkte Sonneneinstrahlung vermeiden.
- Maximale Lagertemperatur: 40 °C.

- Lösungsmittel, Chemikalien, Säuren, Kraftstoffe u.ä. dürfen nicht mit Ventilen und deren Ersatzteilen in einem Raum gelagert werden.


7.4 Benötigtes Werkzeug

- Benötigtes Werkzeug für Einbau und Montage ist **nicht** im Lieferumfang enthalten.
- Passendes, funktionsfähiges und sicheres Werkzeug benutzen.

8 Funktionsbeschreibung

GEMÜ 620 ist ein 2/2 Wege-Metall-Membranventil mit Durchgangskörper. Das Ventil besitzt einen wartungsarmen Membranantrieb, der mit neutralen Gasen angesteuert werden kann. Ventilkörper und Membrane sind gemäß Datenblatt in verschiedenen Ausführungen erhältlich. Vielfältiges Zubehör ist lieferbar, z. B. Hubbegrenzungen, optische und elektrische Stellungsanzeigen, Handnotbetätigung, pneumatische bzw. elektropneumatische Stellungs- und Prozessregler, Pilotventil mit Handnotbetätigung.

9 Geräteaufbau

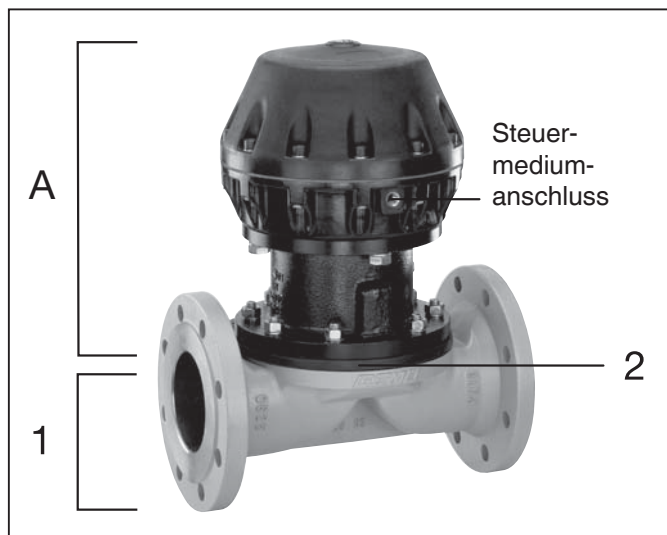


Geräteaufbau

- | | |
|---|--------------|
| 1 | Ventilkörper |
| 2 | Membrane |
| A | Antrieb |

9.1 Typenschild

Geräteversion Ausführung gemäß Bestelldaten

 Filiz-Müller-Str. 6-8 D-74663 Ingeltingen	gerätespezifische Daten	
	620 80D 8 82913/3	PS 7,0 bar
	PST 5,6- 7,0 bar	
	Baujahr	
ERE DE	2020	CE
88663742	12103529	10001
Artikelnummer	Rückmeldenummer	
	Seriennummer	

Der Herstellungsmonat ist unter der Rückmeldenummer verschlüsselt und kann bei GEMÜ erfragt werden.
Das Produkt wurde in Deutschland hergestellt.

10 Montage und Bedienung

Vor Einbau:

- Eignung Ventilkörper- und Membranwerkstoff entsprechend Betriebsmedium prüfen.
Siehe Kapitel 5 "Technische Daten".

10.1 Montage des Ventils

⚠️ WARNUNG

- Unter Druck stehende Armaturen!**
- Gefahr von schwersten Verletzungen oder Tod!
 - Nur an druckloser Anlage arbeiten.

⚠️ WARNUNG



- Aggressive Chemikalien!**
- Verätzungen!
 - Montage nur mit geeigneter Schutzausrüstung.

⚠️ VORSICHT



- Heiße Anlagenteile!**
- Verbrennungen!
 - Nur an abgekühlter Anlage arbeiten.

⚠️ WARNUNG



- Antrieb steht unter Federdruck!**
- Gefahr von schwersten Verletzungen oder Tod!!
 - Antrieb nur unter Presse öffnen.

⚠️ VORSICHT

- Ventil nicht als Trittstufe oder Aufstiegshilfe benutzen!**
- Gefahr des Abrutschens / der Beschädigung des Ventils.

VORSICHT

- Maximal zulässigen Druck nicht überschreiten!**
- Eventuell auftretende Druckstöße (Wasserschläge) durch Schutzmaßnahmen vermeiden.

- Montagearbeiten nur durch geschultes Fachpersonal.
- Geeignete Schutzausrüstung gemäß den Regelungen des Anlagenbetreibers berücksichtigen.

Installationsort:

⚠️ VORSICHT

- Ventil äußerlich nicht stark beanspruchen.
- Installationsort so wählen, dass Ventil nicht als Steighilfe genutzt werden kann.
- Rohrleitung so legen, dass Schub- und Biegekräfte, sowie Vibrationen und Spannungen vom Ventilkörper ferngehalten werden.
- Ventil nur zwischen zueinander passenden, fluchtenden Rohrleitungen montieren.

x Richtung des Betriebsmediums: Beliebig.

x Einbaulage des Ventils: Beliebig.

Montage:

- Eignung des Ventils für jeweiligen Einsatzfall sicherstellen. Das Ventil muss für die Betriebsbedingungen des Rohrleitungssystems (Medium, Mediumkonzentration, Temperatur und Druck) sowie die jeweiligen Umgebungsbedingungen geeignet sein. Technische Daten des Ventils und der Werkstoffe prüfen.
- Anlage bzw. Anlagenteil stilllegen.
- Gegen Wiedereinschalten sichern.


4. Anlage bzw. Anlagenteil drucklos schalten.
5. Anlage bzw. Anlagenteil vollständig entleeren und abkühlen lassen bis Verdampfungstemperatur des Mediums unterschritten ist und Verbrühungen ausgeschlossen sind.
6. Anlage bzw. Anlagenteil fachgerecht dekontaminieren, spülen und belüften.

Montage bei Gewindeanschluss:

- Gewindeanschluss entsprechend der gültigen Normen in Rohr einschrauben.
- Ventilkörper an Rohrleitung anschrauben, geeignetes Gewindedichtmittel verwenden. Das Gewindedichtmittel ist nicht im Lieferumfang enthalten.

Montage bei Flanschanschluss:

1. Auf saubere und unbeschädigte Dichtflächen der Anschlussflansche achten.
2. Flansche vor Verschrauben sorgfältig ausrichten.
3. Dichtungen gut zentrieren.
4. Ventilflansch und Rohrflansch mit geeignetem Dichtmaterial und passenden Schrauben verbinden. Dichtmaterial und Schrauben sind nicht im Lieferumfang enthalten.
5. Alle Flanschbohrungen nutzen.
6. Nur Verbindungselemente aus zulässigen Werkstoffen verwenden!
7. Schrauben über Kreuz anziehen!

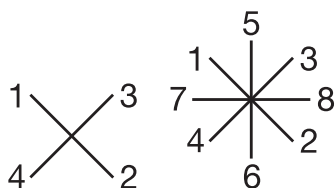

Entsprechende Vorschriften für Anschlüsse beachten!

Nach der Montage:

- Alle Sicherheits- und Schutzvorrichtungen wieder anbringen bzw. in Funktion setzen.

10.2 Steuerfunktionen

Folgende Steuerfunktionen sind verfügbar:

Steuerfunktion 1

Federkraft geschlossen (NC)

Ruhezustand des Ventils: durch Federkraft geschlossen. Ansteuern des Antriebs (Anschluss 2) öffnet das Ventil. Entlüften des Antriebs bewirkt das Schließen des Ventils durch Federkraft.

Steuerfunktion 2


Federkraft geöffnet (NO)

Ruhezustand des Ventils: durch Federkraft geöffnet. Ansteuern des Antriebs (Anschluss 4) schließt das Ventil. Entlüften des Antriebs bewirkt das Öffnen des Ventils durch Federkraft.


Steuerfunktion 3

Beidseitig angesteuert (DA)

Ruhezustand des Ventils: keine definierte Grundposition. Öffnen und Schließen des Ventils durch Ansteuern der entsprechenden Steuermediumanschlüsse (Anschluss 2: Öffnen / Anschluss 4: Schließen).

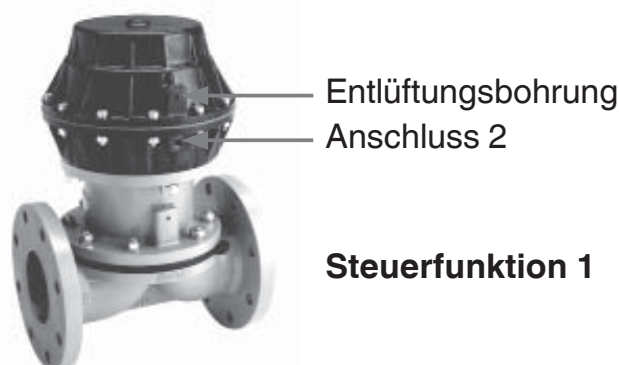

Steuerfunktion 1

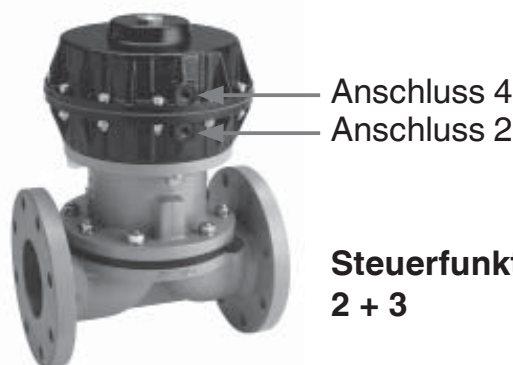

Steuerfunktion 2 + 3

Steuerfunktion	Anschlüsse	
	2	4
1 (NC)	+	-
2 (NO)	-	+
3 (DA)	+	+

Steuerfunktion	Anschlüsse	
	2	4
+ = vorhanden / - = nicht vorhanden (Anschlüsse 2 / 4 siehe Bilder oben)		


10.3 Steuermedium anschließen

☞	<p>Wichtig: Steuermediumleitungen spannungs- und knickfrei montieren! Je nach Anwendung geeignete Anschlussstücke verwenden.</p>
---	---

Gewinde des Steuermediumanschlusses:
G1/4

Steuerfunktion		Anschlüsse
1	Federkraft geschlossen (NC)	2: Steuermedium (Öffnen)
2	Federkraft geöffnet (NO)	4: Steuermedium (Schließen)
3	Beidseitig angesteuert (DA)	2: Steuermedium (Öffnen) 4: Steuermedium (Schließen)
Anschlüsse 2 / 4 siehe Bilder Seite 10		

11 Montage / Demontage von Ersatzteilen

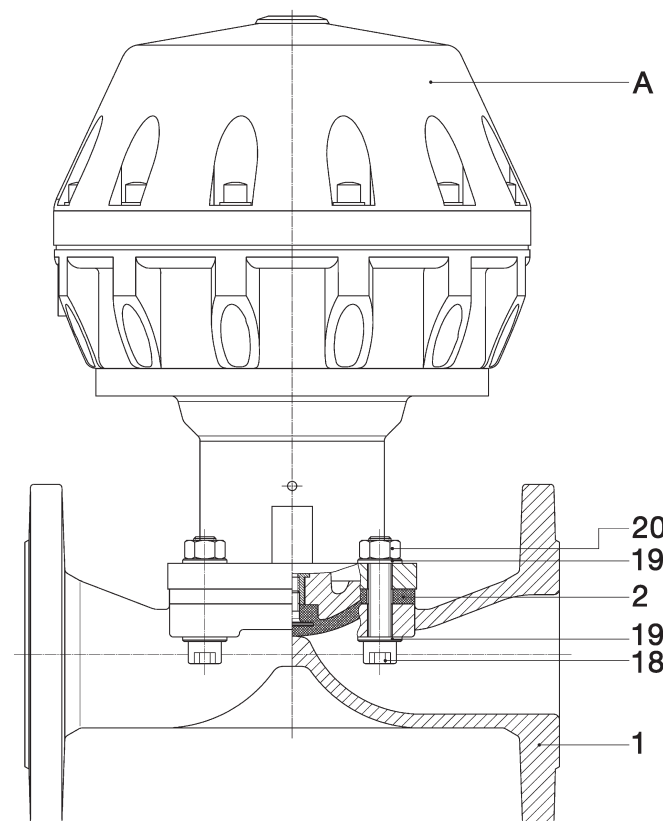

11.1 Demontage Ventil (Antrieb vom Körper lösen)

1. Antrieb **A** in Offen-Position bringen.
2. Antrieb **A** vom Ventilkörper **1** demontieren.
3. Antrieb **A** in Geschlossen-Position bringen.

☞	<p>Wichtig: Nach Demontage alle Teile von Verschmutzungen reinigen (Teile dabei nicht beschädigen). Teile auf Beschädigung prüfen, ggf. auswechseln (nur Originalteile von GEMÜ verwenden).</p>
---	---

11.2 Demontage Membrane

☞	<p>Wichtig: Vor Demontage der Membrane bitte Antrieb demontieren, siehe "Demontage Ventil (Antrieb vom Körper lösen)".</p>
---	--

1. Membrane **2** herausschrauben.
2. Alle Teile von Produktresten und Verschmutzungen reinigen. Teile dabei nicht zerkratzen oder beschädigen!
3. Alle Teile auf Beschädigungen prüfen.
4. Beschädigte Teile austauschen (nur Originalteile von GEMÜ verwenden).

11.3 Montage Membrane

11.3.1 Allgemeines

☞	<p>Wichtig: Für Ventil passende Membrane einbauen (geeignet für Medium, Mediumkonzentration, Temperatur und Druck). Die Absperrmembrane ist ein Verschleißteil. Vor Inbetriebnahme und über gesamte Einsatzdauer des Ventils technischen Zustand und Funktion überprüfen. Zeitliche Abstände der Prüfung entsprechend den Einsatzbelastungen und / oder der für den Einsatzfall geltenden Regelwerken und Bestimmungen festlegen und regelmäßig durchführen.</p>
---	--

**Wichtig:**

Ist die Membrane nicht weit genug in das Verbindungsstück eingeschraubt, wirkt die Schließkraft direkt auf den Membranpin und nicht über das Druckstück. Das führt zu Beschädigungen und frühzeitigem Ausfall der Membrane und Undichtheit des Ventils. Wird die Membrane zu weit eingeschraubt, erfolgt keine einwandfreie Dichtung mehr am Ventilsitz. Die Funktion des Ventils ist nicht mehr gewährleistet.

**Wichtig:**

Falsch montierte Membrane führt ggf. zu Undichtheit des Ventils / Mediumsaustritt. Ist dies der Fall dann Membrane demontieren, komplettes Ventil und Membrane überprüfen und erneut nach obiger Anleitung montieren.

Das Druckstück ist bei Membrangröße 25-50 (DN 15-50) lose.

Das Druckstück ist bei Membrangröße 65-150 (DN 65-150) fest montiert.

Membrangröße 25 - 50 (DN 15 - 50):

Druckstück und Antriebsflansch von unten gesehen:



Druckstück lose auf Antriebsspindel aufsetzen, Aussparungen in Führungen einpassen (Pfeile).

Membrangröße 65, 80 (DN 65, 80):


Druckstück und Antriebsflansch von unten gesehen:

**Membrangröße 100, 125 (DN 100, 125):**

Druckstück und Antriebsflansch von unten gesehen:

**Membrangröße 150 (DN 150):**

Druckstück und Antriebsflansch von unten gesehen:

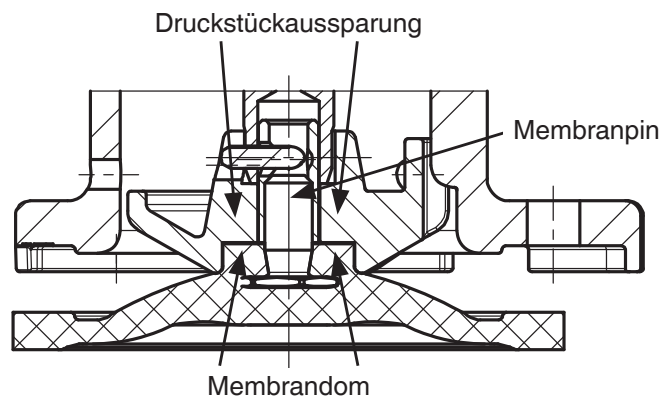
**11.3.2 Montage der Konkav-Membrane**

1. Antrieb **A** in Geschlossen-Position bringen.

2. Bei Membrangröße 25-50 (DN 15-50) Druckstück lose auf Antriebsspindel aufsetzen, Aussparungen in Führungen einpassen (siehe Kapitel 11.3.1 "Allgemeines").
3. Kontrollieren ob das Druckstück in den Führungen liegt.
4. Neue Membrane von Hand fest in Druckstück einschrauben.
5. Kontrollieren ob Membrandom in Druckstückaussparung liegt.
6. Bei Schwergängigkeit Gewinde prüfen, beschädigte Teile austauschen (nur Originalteile von GEMÜ verwenden).
7. Beim Verspüren eines deutlichen Widerstands Membrane soweit zurückschrauben, bis Membran-Lochbild mit Antriebs-Lochbild übereinstimmt.


11.3.3 Montage der Konvex-Membrane

1. Antrieb **A** in Geschlossen-Position bringen.
2. Bei Membrangröße 25-50 (DN 15-50) Druckstück lose auf Antriebsspindel aufsetzen, Aussparungen in Führungen einpassen (siehe Kapitel 11.3.1 "Allgemeines").
3. Kontrollieren ob das Druckstück in den Führungen liegt.
4. Neuen Membranschild von Hand umklappen; bei großen Nennweiten saubere, gepolsterte Unterlage verwenden.

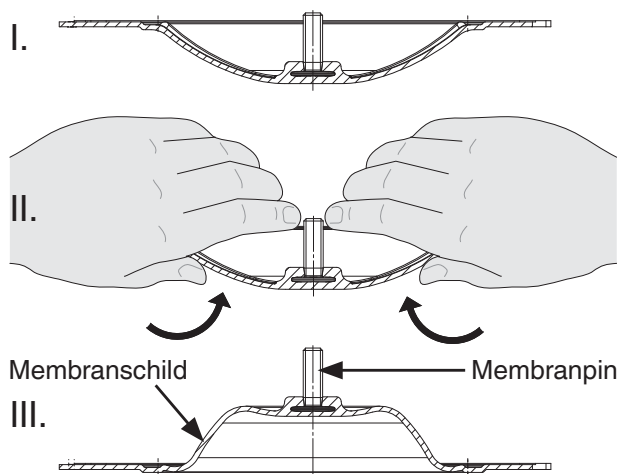

5. Neue Stützmembrane auf Druckstück auflegen.
6. Membranschild auf Stützmembrane auflegen.


7. Membranschild von Hand fest in Druckstück einschrauben. Der Membrandom muss in der Druckstückaussparung liegen.

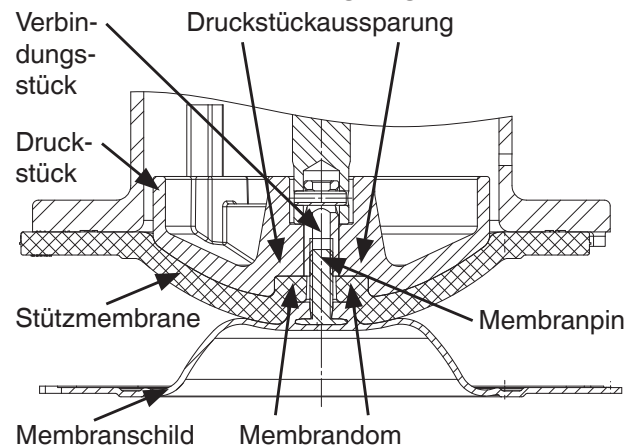

8. Bei Schwergängigkeit das Gewinde prüfen, beschädigte Teile austauschen.
9. Beim Verspüren eines deutlichen Widerstands Membrane soweit zurückschrauben, bis Membran-Lochbild mit Antriebs-Lochbild übereinstimmt.
10. Membranschild von Hand fest auf die Stützmembrane drücken, so dass sie zurückklappt und an der Stützmembrane anliegt.


11.4 Montage Antrieb auf Ventilkörper

1. Antrieb **A** in Offen-Position bringen.
2. Antrieb **A** mit montierter Membrane **2** auf Ventilkörper **1** aufsetzen, auf Übereinstimmung von Membransteg und Ventilkörpersteg achten.
3. Schrauben **18**, Scheiben **19** und Muttern **20** handfest montieren.
4. Antrieb **A** in Geschlossen-Position bringen.
5. Schrauben **18** mit Muttern **20** über Kreuz festziehen.

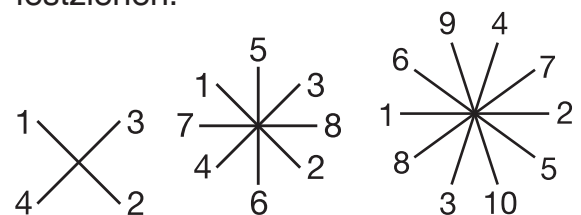


6. Auf gleichmäßige Verpressung der Membrane **2** achten (ca. 10-15 %, erkennbar an gleichmäßiger Außenwölbung).

7. Komplett montiertes Ventil auf Dichtheit prüfen.

	<p>Wichtig: Membranen setzen sich im Lauf der Zeit. Nach Installation und Inbetriebnahme des Ventils unbedingt Schrauben 18 und Muttern 20 (siehe Kapitel 19 "Schnittbilder und Ersatzteile") nachziehen.</p>
--	--

12 Inbetriebnahme

⚠️ WARNUNG	
	<p>Aggressive Chemikalien!</p> <ul style="list-style-type: none">➤ Verätzungen!● Vor Inbetriebnahme Dichtheit der Medienanschlüsse prüfen!● Dichtheitsprüfung nur mit geeigneter Schutzausrüstung.

⚠️ VORSICHT	
<p>Gegen Leckage vorbeugen!</p> <ul style="list-style-type: none">● Schutzmaßnahmen gegen Überschreitung des maximal zulässigen Drucks durch eventuelle Druckstöße (Wasserschläge) vorsehen.	

Vor Reinigung bzw. vor Inbetriebnahme der Anlage:


- Ventil auf Dichtheit und Funktion prüfen (Ventil schließen und wieder öffnen).
- Bei neuen Anlagen und nach Reparaturen Leitungssystem bei voll geöffnetem Ventil spülen (zum Entfernen schädlicher Fremdstoffe).

Reinigung:

- x Betreiber der Anlage ist verantwortlich für Auswahl des Reinigungsmediums und Durchführung des Verfahrens.

13 Inspektion und Wartung

⚠️ WARNUNG	
<p>Unter Druck stehende Armaturen!</p> <ul style="list-style-type: none">➤ Gefahr von schwersten Verletzungen oder Tod!● Nur an druckloser Anlage arbeiten.	

⚠️ VORSICHT	
	<p>Heiße Anlagenteile!</p> <ul style="list-style-type: none">➤ Verbrennungen!● Nur an abgekühlter Anlage arbeiten.

⚠️ VORSICHT	
<ul style="list-style-type: none">● Wartungs- und Instandhaltungstätigkeiten nur durch geschultes Fachpersonal.● Für Schäden welche durch unsachgemäße Handhabung oder Fremdeinwirkung entstehen, übernimmt GEMÜ keinerlei Haftung.● Nehmen Sie im Zweifelsfall vor Inbetriebnahme Kontakt mit GEMÜ auf.	

1. Geeignete Schutzausrüstung gemäß den Regelungen des Anlagenbetreibers berücksichtigen.
2. Anlage bzw. Anlagenteil stilllegen.
3. Gegen Wiedereinschalten sichern.
4. Anlage bzw. Anlagenteil drucklos schalten.

Der Betreiber muss regelmäßige Sichtkontrollen der Ventile entsprechend den Einsatzbedingungen und des Gefährdungspotenzials zur Vorbeugung von Undichtheit und Beschädigungen durchführen. Ebenso muss das Ventil in entsprechenden Intervallen demontiert und auf Verschleiß geprüft werden (siehe Kapitel 11 "Montage / Demontage von Ersatzteilen").

14 Demontage

Demontage erfolgt unter den gleichen Vorsichtsmaßnahmen wie die Montage.


- Ventil demontieren (siehe Kapitel 11.1 "Demontage Ventil (Antrieb vom Körper lösen)").

15 Entsorgung



- Alle Ventiltteile entsprechend den Entsorgungsvorschriften / Umweltschutzbestimmungen entsorgen.
- Auf Restanhaftungen und Ausgasung von eindiffundierten Medien achten.

15.1 Demontage zur Entsorgung für Steuerfunktion 1

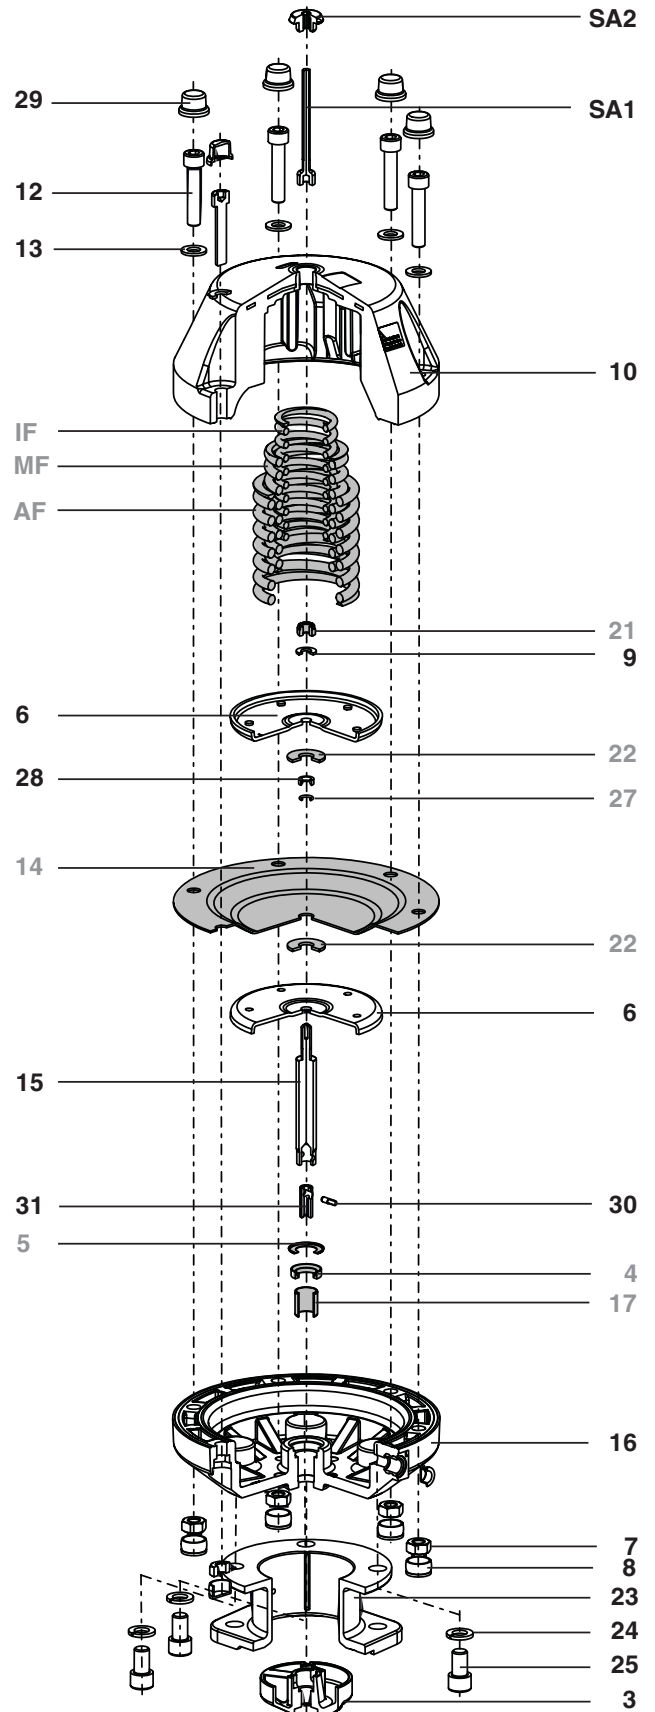

⚠️ WARNUNG



Antrieb steht unter Federdruck!

- Gefahr von schwersten Verletzungen oder Tod!
- Antrieb nur unter Presse öffnen.

1. Antrieb von Steuermedium trennen.
2. Loses Druckstück **3** entfernen.
3. Abdeckkappe **SA2** entfernen.
4. Optische Stellungsanzeige **SA1** entfernen.
5. Abdeckkappen **29** entfernen.
6. Antrieb in Presse einspannen.

VORSICHT

Zu starker Pressdruck!

- Bruchgefahr des Antriebsoberteils **10**!
- Nur minimal nötigen Druck ausüben.

7. Schrauben **12** mit Scheiben **13** zwischen Antriebsoberteil **10** und Antriebsunterteil **16** lösen und entfernen.
8. Pressdruck langsam wegnehmen.
9. Antriebsoberteil **10** entfernen.
10. Federpaket, bestehend aus Druckfedern **IF**, **MF** und **AF**, aus Antriebsunterteil **16** entfernen.

16 Rücksendung

- Ventil reinigen.
- Rücksendeerklärung bei GEMÜ anfordern.
- Rücksendung nur mit vollständig ausgefüllter Rücksendeerklärung.

Ansonsten erfolgt keine

- x Gutschrift bzw. keine
 - x Erledigung der Reparatur
- sondern eine kostenpflichtige Entsorgung.



Hinweis zur Rücksendung:

Aufgrund gesetzlicher Bestimmungen zum Schutz der Umwelt und des Personals ist es erforderlich, dass die Rücksendeerklärung vollständig ausgefüllt und unterschrieben den Versandpapieren beiliegt. Nur wenn diese Erklärung vollständig ausgefüllt ist, wird die Rücksendung bearbeitet!

17 Hinweise



Hinweis zur Richtlinie 2014/34/EU (ATEX Richtlinie):

Ein Beiblatt zur Richtlinie 2014/34/EU liegt dem Produkt bei, sofern es gemäß ATEX bestellt wurde.



Hinweis zur Mitarbeiterschulung:

Zur Mitarbeiterschulung nehmen Sie bitte über die Adresse auf der letzten Seite Kontakt auf.

Im Zweifelsfall oder bei Missverständnissen ist die deutsche Version des Dokuments ausschlaggebend!


18 Fehlersuche / Störungsbehebung

Fehler	Möglicher Grund	Fehlerbehebung
Steuermedium entweicht aus Entlüftungsbohrung* im Oberteil des Antriebs bei Steuerfunktion NC bzw. Anschluss 2* bei Steuerfunktion NO	Steuermembrane defekt	Antrieb austauschen
Steuermedium entweicht aus Leckagebohrung*	Spindelabdichtung undicht	Antrieb austauschen und Steuermedium auf Verschmutzungen untersuchen
Betriebsmedium entweicht aus Leckagebohrung*	Absperrmembrane defekt	Absperrmembrane auf Beschädigungen prüfen, ggf. Membrane tauschen
Steuermedium entweicht an Steuermembrane* nach außen	Verbindungsschrauben zwischen Ober- und Unterteil des Antriebs locker	Schrauben fachgerecht über Kreuz nachziehen
Ventil öffnet nicht bzw. nicht vollständig	Steuerdruck zu niedrig (bei Steuerfunktion NC)	Ventil mit Steuerdruck laut Datenblatt betreiben
	Vorsteuerventil defekt	Vorsteuerventil prüfen und austauschen
	Steuermedium nicht angeschlossen	Steuermedium anschließen
	Absperrmembrane nicht korrekt montiert	Antrieb demontieren, Membranmontage prüfen, ggf. austauschen
	Antriebsfeder defekt (bei Steuerfunktion NO)	Antrieb austauschen
Ventil im Durchgang undicht (schließt nicht bzw. nicht vollständig)	Betriebsdruck zu hoch	Ventil mit Betriebsdruck laut Datenblatt betreiben
	Steuerdruck zu niedrig (bei Steuerfunktion NO und bei Steuerfunktion DA)	Ventil mit Steuerdruck laut Datenblatt betreiben
	Fremdkörper zwischen Absperrmembrane und Ventilkörpersteg	Antrieb demontieren, Fremdkörper entfernen, Absperrmembrane und Ventilkörpersteg auf Beschädigungen untersuchen, ggf. austauschen
	Ventilkörpersteg undicht bzw. beschädigt	Ventilkörpersteg auf Beschädigungen prüfen, ggf. Ventilkörper tauschen
	Absperrmembrane defekt	Absperrmembrane auf Beschädigungen prüfen, ggf. Membrane tauschen
	Antriebsfeder defekt (bei Steuerfunktion NC)	Antrieb austauschen
Ventil zwischen Antrieb und Ventilkörper undicht	Absperrmembrane falsch montiert	Antrieb demontieren, Membranmontage prüfen, ggf. austauschen
	Verschraubung zwischen Ventilkörper und Antrieb lose	Verschraubung zwischen Ventilkörper und Antrieb nachziehen
	Absperrmembrane defekt	Absperrmembrane auf Beschädigungen prüfen, ggf. Membrane tauschen
	Antrieb / Ventilkörper beschädigt	Antrieb / Ventilkörper tauschen
Verbindung Ventilkörper - Rohrleitung undicht	Unsachgemäße Montage	Montage Ventilkörper in Rohrleitung prüfen
	Gewindeanschlüsse / Verschraubungen lose	Gewindeanschlüsse / Verschraubungen festziehen
	Dichtmittel defekt	Dichtmittel ersetzen
Ventilkörper undicht	Ventilkörper defekt oder korrodiert	Ventilkörper auf Beschädigungen prüfen, ggf. Ventilkörper tauschen


* siehe Kapitel 10.2 "Steuerfunktionen" und Kapitel 19 "Schnittbilder und Ersatzteile"

19 Schnittbilder und Ersatzteile

Membrangröße 25 - 80

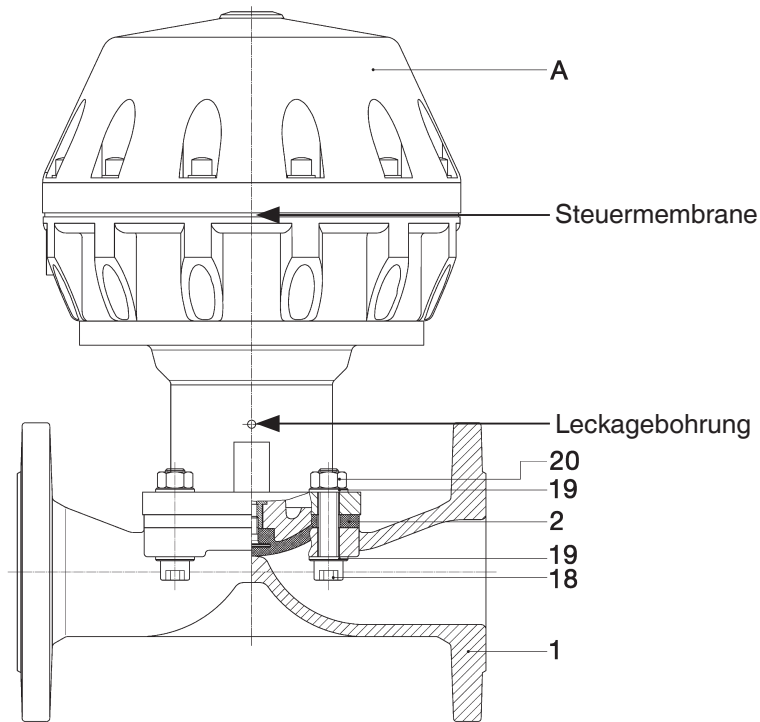

Membrangröße 100 - 150

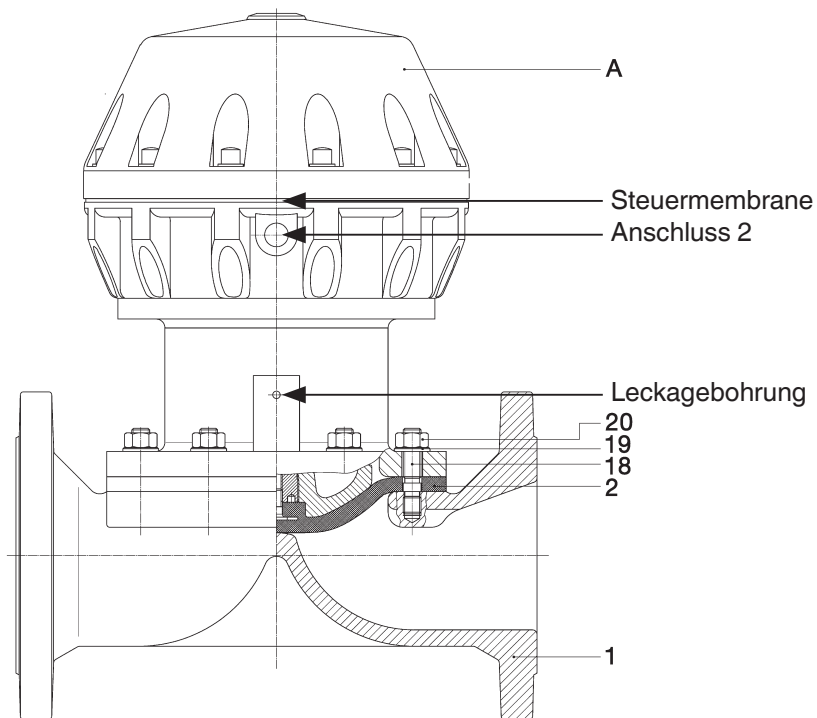

Pos.	Benennung	Bestellbezeichnung
1	Ventilkörper	K600... (DN 15-50)
		K620... (ab DN 65)
2	Membrane	600...M... (DN 15-50)
		620...M... (ab DN 65)
18	Schraube	} 620...S30...
19	Scheibe	
20	Mutter	
A	Antrieb	9620...

Einbauerklärung

im Sinne der EG-Maschinenrichtlinie 2006/42/EG, Anh. II, 1.B
für unvollständige Maschinen

Hersteller: GEMÜ Gebr. Müller Apparatebau GmbH & Co. KG
Postfach 30
Fritz-Müller-Straße 6-8
D-74653 Ingelfingen-Criesbach

Beschreibung und Identifizierung der unvollständigen Maschine:

Fabrikat: GEMÜ Membranventil pneumatisch betätigt
Seriennummer: ab 29.12.2009
Projektnummer: MV-Pneum-2009-12
Handelsbezeichnung: Typ 620

Es wird erklärt, dass die folgenden grundlegenden Anforderungen der Maschinenrichtlinie 2006/42/EG erfüllt sind:

1.1.3.; 1.1.5.; 1.1.7.; 1.2.1.; 1.3.; 1.3.2.; 1.3.3.; 1.3.4.; 1.3.7.; 1.3.9.; 1.5.3.; 1.5.5.; 1.5.6.; 1.5.7.; 1.5.8.; 1.5.9.;
1.6.5.; 2.1.1.; 3.2.1.; 3.2.2.; 3.3.2.; 3.4.4.; 3.6.3.1.; 4.1.2.1.; 4.1.2.3.; 4.1.2.4.; 4.1.2.5.; 4.1.2.6. a); 4.1.2.6. b);
4.1.2.6. c); 4.1.2.6. d); 4.1.2.6. e); 4.1.3.; 4.2.1.; 4.2.1.4.; 4.2.2.; 4.2.3.; 4.3.1.; 4.3.2.; 4.3.3.; 4.4.1.; 4.4.2.; 5.3.;
5.4.; 6.1.1.; 6.3.3.; 6.4.1.; 6.4.3.

Ferner wird erklärt, dass die speziellen technischen Unterlagen gemäß Anhang VII Teil B erstellt wurden.

Es wird ausdrücklich erklärt, dass die unvollständige Maschine allen einschlägigen Bestimmungen der folgenden EG-Richtlinien entspricht:


2006/42/EC:2006-05-17: (Maschinenrichtlinie) Richtlinie 2006/42/EG des Europäischen Parlaments und des Rates vom 17. Mai 2006 über Maschinen und zur Änderung der Richtlinie 95/16/EG (Neufassung) (1)

Der Hersteller bzw. der Bevollmächtigte verpflichten sich, einzelstaatlichen Stellen auf begründetes Verlangen die speziellen Unterlagen zu der unvollständigen Maschine zu übermitteln. Diese Übermittlung erfolgt:

elektronisch

Die gewerblichen Schutzrechte bleiben hiervon unberührt!

Wichtiger Hinweis! Die unvollständige Maschine darf erst dann in Betrieb genommen werden, wenn gegebenenfalls festgestellt wurde, dass die Maschine, in die die unvollständige Maschine eingebaut werden soll, den Bestimmungen dieser Richtlinie entspricht.

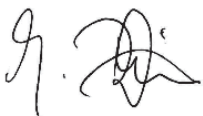

Joachim Brien
Leiter Bereich Technik

Ingelfingen-Criesbach, Februar 2013

Konformitätserklärung

Gemäß der Richtlinie 2014/68/EU

Wir, die Firma **GEMÜ Gebr. Müller Apparatebau GmbH & Co. KG**
Fritz-Müller-Straße 6-8
D-74653 Ingelfingen

erklären, dass unten aufgeführte Armaturen die Sicherheitsanforderungen der Druckgeräterichtlinie 2014/68/EU erfüllen.

Benennung der Armaturen - Typenbezeichnung

Membranventil
GEMÜ 620


Benannte Stelle: TÜV Rheinland Industrie Service GmbH
Nummer: 0035
Zertifikat-Nr.: 01 202 926/Q-02 0036
Angewandte Normen: AD 2000

Konformitätsbewertungsverfahren:
Modul H1

Hinweis für Armaturen mit einer Nennweite \leq DN 25:

Die Produkte werden entwickelt und produziert nach GEMÜ eigenen Verfahrensanweisungen und Qualitätsstandards, welche die Forderungen der ISO 9001 und der ISO 14001 erfüllen.

Die Produkte dürfen gemäß Artikel 4, Absatz 3 der Druckgeräterichtlinie 2014/68/EU keine CE- Kennzeichnung tragen.

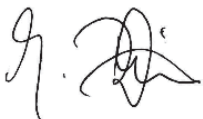

Joachim Brien
Leiter Bereich Technik

Ingelfingen-Criesbach, März 2019

Contents

1	General information	21
2	General safety information	21
2.1	Information for service and operating personnel	22
2.2	Warning notes	22
2.3	Symbols used	23
2.4	Safety information on the product	23
3	Definition of terms	23
4	Intended area of use	23
5	Technical data	24
6	Order data	26
7	Manufacturer's information	26
7.1	Transport	26
7.2	Delivery and performance	26
7.3	Storage	27
7.4	Tools required	27
8	Functional description	27
9	Construction	27
9.1	Type plate	27
10	Installation and operation	28
10.1	Installing the valve	28
10.2	Control functions	29
10.3	Connecting the control medium	30
11	Assembly / disassembly of spare parts	30
11.1	Valve disassembly (removing actuator from body)	30
11.2	Removing the diaphragm	30
11.3	Mounting the diaphragm	31
11.3.1	General information	31
11.3.2	Mounting a concave diaphragm	32
11.3.3	Mounting a convex diaphragm	32
11.4	Actuator mounting on the valve body	33
12	Commissioning	33
13	Inspection and servicing	33
14	Disassembly	34
15	Disposal	34
15.1	Disassembly for disposal for control function 1	34
16	Returns	35
17	Information	35
18	Troubleshooting / Fault clearance	36


19	Sectional drawings and spare parts	37
20	Declaration of incorporation	38
21	EU Declaration of conformity	39


1 General information

Prerequisites to ensure that the GEMÜ valve functions correctly:

- x Correct transport and storage
- x Installation and commissioning by trained personnel
- x Operation according to these installation, operating and maintenance instructions
- x Recommended maintenance

Correct installation, operation, servicing and repair work ensure faultless valve operation.

	The descriptions and instructions apply to the standard versions. For special versions not described in these installation, operating and maintenance instructions the basic information contained herein applies in combination with any additional special documentation.
---	---

	All rights including copyright and industrial property rights are expressly reserved.
---	---

2 General safety information

The safety information does not take into account:

- x Unexpected incidents and events, which may occur during installation, operation and servicing.
- x Local safety regulations which must be adhered to by the operator and by any additional installation personnel.

2.1 Information for service and operating personnel

The installation, operating and maintenance instructions contain fundamental safety information that must be observed during commissioning, operation and servicing. Non-compliance with these instructions may cause:

- x Personal hazard due to electrical, mechanical and chemical effects.
- x Hazard to nearby equipment.
- x Failure of important functions.
- x Hazard to the environment due to the leakage of dangerous materials.

Prior to commissioning:

- Read the installation, operating and maintenance instructions.
- Provide adequate training for the installation and operating personnel.
- Ensure that the contents of the installation, operating and maintenance instructions have been fully understood by the responsible personnel.
- Define the areas of responsibility.

During operation:

- Keep the installation, operating and maintenance instructions available at the place of use.
- Observe the safety information.
- Use only in accordance with the specifications.
- Any servicing work and repairs not described in the installation, operating and maintenance instructions must not be performed without consulting the manufacturer first.

⚠ DANGER

Strictly observe the safety data sheets or the safety regulations that are valid for the media used.

In cases of uncertainty:

- x Consult the nearest GEMÜ sales office.

2.2 Warning notes

Wherever possible, warning notes are organised according to the following scheme:

⚠ SIGNAL WORD

Type and source of the danger

- Possible consequences of non-observance.
- Measures for avoiding danger.

Warning notes are always marked with a signal word and sometimes also with a symbol for the specific danger.

The following signal words and danger levels are used:

⚠ DANGER

Imminent danger!

- Non-observance will lead to death or severe injury.

⚠ WARNING

Potentially dangerous situation!

- Non-observance can cause death or severe injury.

⚠ CAUTION

Potentially dangerous situation!





- Non-observance can cause moderate to light injury.

CAUTION (WITHOUT SYMBOL)


Potentially dangerous situation!


- Non-observance can cause damage to property.

2.3 Symbols used

	Danger - hot surfaces!
	Danger - corrosive materials!
	Danger from spring pressure!
	Hand: indicates general information and recommendations.
●	Bullet point: indicates the tasks to be performed.
➤	Arrow: indicates the response(s) to tasks.
x	Enumeration sign

2.4 Safety information on the product

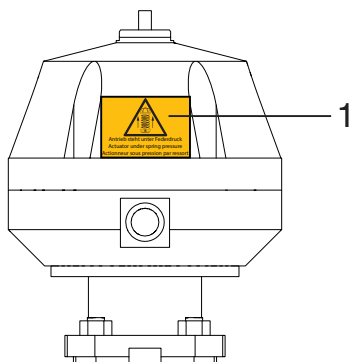

1		Actuator under spring pressure. <ul style="list-style-type: none"> ● Only open the actuator under a press.
---	---	--

The adhesive label on the product is printed in German, English and French as supplied. If the product is used in a country where a different language is spoken, a label in the corresponding language must be attached.

Missing or illegible adhesive labels on the product must be attached or replaced (see chapter 7.2 "Delivery and performance").

If the adhesive label is required in other, not enclosed, languages, it must be produced and attached by the customer on his own responsibility.

3 Definition of terms

Working medium

The medium that flows through the valve.

Control medium

The medium with which increasing or decreasing pressure causes the valve to be actuated and operated.

Control function

The possible actuation functions of the valve.

4 Intended area of use

- x The GEMÜ 620 diaphragm valve is designed for installation in piping systems. It controls a flowing medium by being closed or opened by a control medium.
- x **The valve may only be used providing the product technical criteria are complied with (see chapter 5 "Technical Data").**
- x Do not paint the bolts and plastic parts of the valve!

⚠ WARNING

Use the valve only for the intended purpose!

- Otherwise the manufacturer liability and guarantee will be void.
- Use the valve only in accordance with the operating conditions specified in the contract documentation and in the installation, operating and maintenance instructions.
- The valve may only be used in potentially explosive zones confirmed in the declaration of conformity (ATEX).

5 Technical data

Operating pressure, Control pressure [bar]					
		Control function 1			
		Actuator size	Operating pressure		Control pressure for max. stroke
MG	DN	Code	EPDM/FKM	PTFE	
25	15	0/N	0 - 10	0 - 6	5.5 - 7.0
	20				
	25				
40	32	1/N	0 - 10	0 - 6	5.5 - 7.0
	40				
50	50	2/N	0 - 10	0 - 6	5.5 - 7.0
65	65	3/1	0 - 3	0 - 2	2.6 - 7.0
	65	3A1	0 - 3	0 - 2	3.0 - 7.0
	65	3/2	0 - 6	0 - 4	4.5 - 7.0
	65	3A2	0 - 6	0 - 4	4.5 - 7.0
	65	3/3	0 - 10	0 - 6	5.5 - 7.0
	65	3A3	0 - 10	0 - 6	6.0 - 7.0
80	80	3/2	0 - 3	0 - 2	4.5 - 7.0
	80	3A2	0 - 3	0 - 2	5.0 - 7.0
	80	3/3	0 - 7	0 - 5	5.6 - 7.0
	80	3A3	0 - 7	0 - 5	6.5 - 7.0
	80	4A2	0 - 10	0 - 6	3.5 - 7.0
100	100	3/3	0 - 6	0 - 4	6.2 - 7.0
	100	3A3	0 - 6	0 - 4	6.5 - 7.0
	100	4A3	0 - 10	0 - 6	4.5 - 7.0
125	125	4A2	0 - 5	0 - 3	4.0 - 7.0
	125	4A3	0 - 8	0 - 5	5.5 - 7.0
150	150	4A3	0 - 6	0 - 4	5.5 - 7.0

All pressures are gauge pressures. Operating pressure values were determined with static operating pressure applied on one side of a closed valve. Sealing at the valve seat and atmospheric sealing is ensured for the given values.

Information on operating pressures applied on both sides and for high purity media on request. MG = diaphragm size

Operating pressure, Control pressure [bar]									
		Control function 2				Control function 3			
		Actuator size	Operating pressure		Control pressure see diagram	Actuator size	Operating pressure		Control pressure see diagram
MG	DN	Code	EPDM/FKM	PTFE		Code	EPDM/FKM	PTFE	
25	15	0/F	0 - 10	0 - 6	max. 5.5	0/D	0 - 10	0 - 6	max. 5.5
	20								
	25								
40	32	1/F	0 - 10	0 - 6	max. 5.5	1/D	0 - 10	0 - 6	max. 5.5
	40								
50	50	2/F	0 - 10	0 - 6	max. 5.0	2/D	0 - 10	0 - 6	max. 5.0
65	65	3/F 3AF	0 - 10	0 - 6	max. 4.5	3/D 3AD	0 - 10	0 - 6	max. 4.0
	65								
	65								
	65								
	65								
80	80	3/F 3AF	0 - 10	0 - 6	max. 5.5	3/D 3AD	0 - 10	0 - 6	max. 5.0
	80								
	80								
	80								
	80								
100	100	3/F	0 - 6	0 - 4	max. 5.0	3/D	0 - 6	0 - 4	max. 4.5
	100	3AF	0 - 6	0 - 4	max. 5.0	3AD	0 - 6	0 - 4	max. 4.5
	100	4AF	0 - 10	0 - 6	max. 3.5	4AD	0 - 10	0 - 6	max. 3.0
125	125	4AF	0 - 10	0 - 6	max. 4.5	4AD	0 - 10	0 - 6	max. 4.0
	125								
150	150	4AF	0 - 8	0 - 5	max. 4.5	4AD	0 - 8	0 - 5	max. 4.0

All pressures are gauge pressures. Operating pressure values were determined with static operating pressure applied on one side of a closed valve. Sealing at the valve seat and atmospheric sealing is ensured for the given values.

Information on operating pressures applied on both sides and for high purity media on request. MG = diaphragm size

Working medium

Corrosive, inert, gaseous and liquid media which have no negative impact on the physical and chemical properties of the body and diaphragm material.

Max. perm. temperature of working medium 150 °C
(depending on medium, diaphragm and valve body material)

Ambient conditions

Ambient temperature 0 to 60 °C

Control medium

Inert gases

Max. perm. temperature of control medium 40 °C

Filling volume

Actuator size 0	0.15 dm ³
Actuator size 1	0.35 dm ³
Actuator size 2	1.10 dm ³
Actuator size 3	2.5 dm ³
Actuator size 4	6.8 dm ³


Kv Value [m ³ /h]				
MG	DN	GG 25	PFA / PP	Hard rubber
25	15	7	5	6
	20	14	9	11
	25	20	13	15
40	32	36	23	29
	40	40	26	32
50	50	80	47	64
	65			
65	65	100	72	80
	65			
	65			
	65			
	65			
80	80	160	110	128
	80			
	80			
	80			
100	100	238	177	190
	100			
	100			
125	125	270	214	230
	125			
150	150	480	365	397

Kv values determined acc. to DIN EN 60534, inlet pressure 5 bar, Δp 1 bar, valve body material cast iron EN-GJL-250 and flanges EN 1092 length EN 558 series 1 and soft elastomer diaphragm.


The Kv values for other product configurations (e.g. other diaphragm or body materials) may differ. In general, all diaphragms are subject to the influences of pressure, temperature, the process and their tightening torques. Therefore the Kv values may exceed the tolerance limits of the standard.

MG = diaphragm size


Operating pressure - Control pressure
Actuator 0/F, 1/F, 2/F

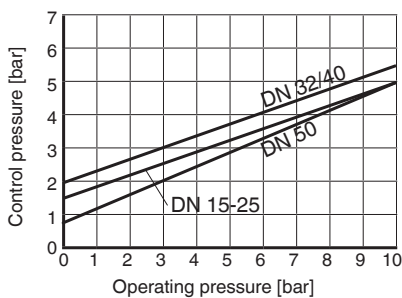

Operating pressure - Control pressure
Actuator 3/F, 3A/F

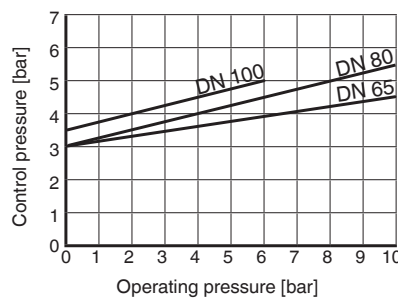

Operating pressure - Control pressure
Actuator 4A/F

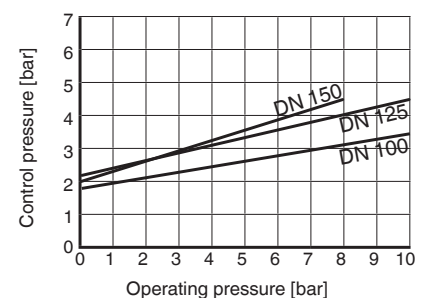

Note: In the above diagrams, for normally open actuators (c.f. 2) the minimum necessary control pressure is given in accordance with the operating pressure.

6 Order data

Body configuration	Code
2/2-way	D

Connection	Code
------------	------

Threaded connections	
Threaded sockets DIN ISO 228	1

Flanges	
Flanges EN 1092 / PN16 / form B, length EN 558, series 1, ISO 5752, basic series 1	8

Flanges ANSI Class 125/150 RF, length MSS SP-88	38
---	----

Flanges ANSI Class 125/150 RF, length EN 558, series 1, ISO 5752, basic series 1	39
--	----

Flanges BS 10 Table "E", length EN 558, series 7, ISO 5752, basic series 7	51
--	----

Flanges EN 1092 / PN16 / form A, length EN 558, series 7, ISO 5752, basic series 7	53
--	----

Flanges ANSI Class 125/150 RF, length EN 558, series 7, ISO 5752, basic series 7	56
--	----

Flange ratings refer to flange class only.
For valve operating pressures see Technical data.

Valve body material	Code
---------------------	------

EN-GJL-250 (GG 25 Cast iron)	8
------------------------------	---

EN-GJS-400-18-LT (GGG 40.3 SG iron) PFA lined	17
---	----

EN-GJS-400-18-LT (GGG 40.3 SG iron) PP lined	18
--	----

EN-GJS-500-7 (GGG 50 Ductile iron) PFA lined	81
--	----

EN-GJS-400-18-LT (GGG 40.3 SG iron) Hard rubber lined	83
---	----

EN-GJS-500-7 (GGG 50 Ductile iron) PP lined	91
---	----

Diaphragm material	Code
--------------------	------

NBR	2
-----	---

FKM	4
-----	---

CR	8
----	---

EPDM	29
------	----

PTFE/EPDM, one-piece	54
----------------------	----

PTFE/EPDM, two-piece	5M*
----------------------	-----

*For use with valve bodies see page 11

Control function	Code
------------------	------

Normally closed (NC)	1
----------------------	---

Normally open (NO)	2
--------------------	---

Double acting (DA)	3
--------------------	---

Actuator version	Code
------------------	------

Material of actuator cover: Plastic

MG	DN	C. f. 1	C. f. 2	C. f. 3
----	----	---------	---------	---------

25	15 - 25	0/N	0/F	0/D
----	---------	-----	-----	-----

40	32 + 40	1/N	1/F	1/D
----	---------	-----	-----	-----

50	50	2/N	2/F	2/D
----	----	-----	-----	-----

65 - 100	65 - 100	3/1, 3/2, 3/3	3/F	3/D
----------	----------	---------------	-----	-----

Material of actuator cover: Metal

MG	DN	C. f. 1	C. f. 2	C. f. 3
----	----	---------	---------	---------

65 - 100	65 - 100	3A1, 3A2, 3A3	3AF	3AD
----------	----------	---------------	-----	-----

80 - 150	80 - 150	4A2, 4A3	4AF	4AD
----------	----------	----------	-----	-----

MG = Diaphragm size

Order example	620	80	D	8	8	29	1	3/3
Type	620							
Nominal size		80						
Body configuration (code)			D					
Connection (code)				8				
Valve body material (code)					8			
Diaphragm material (code)						29		
Control function (code)							1	
Actuator version (code)								3/3

Other connections, valve body materials, linings and diaphragm materials on request.

7 Manufacturer's information

7.1 Transport

- Only transport the valve by suitable means. Do not drop. Handle carefully.
- Dispose of packing material according to relevant local or national disposal regulations / environmental protection laws.

7.2 Delivery and performance

- Check that all parts are present and check for any damage immediately upon receipt.
- The scope of delivery is apparent from the dispatch documents and the design from the order number.
- The valve's delivery condition:

Control function:	Status:
1 Normally closed (NC)	closed
2 Normally open (NO)	open
3 Double acting (DA)	undefined

- The performance of the valve is checked at the factory.
- Adhesive label with warning notes in other languages.



7.3 Storage

- Store the valve free from dust and moisture in its original packaging.
- Avoid UV rays and direct sunlight.
- Maximum storage temperature: 40 °C.
- Solvents, chemicals, acids, fuels or similar fluids must not be stored in the same room as valves and their spare parts.

7.4 Tools required


- The tools required for installation and assembly are **not** included in the scope of delivery.
- Use appropriate, functional and safe tools.

8 Functional description

GEMÜ 620 is a 2/2-way metal diaphragm valve with a straight through body. It has a low maintenance membrane actuator which can be controlled by inert gaseous media. The valve body and the diaphragm are available in various designs as shown in the data sheet.

Diverse accessories are available, such as stroke limiters, optical and electrical position indicators, manual override, pneumatic or electro-pneumatic positioners and process controllers, pilot valve with manual override.

9 Construction

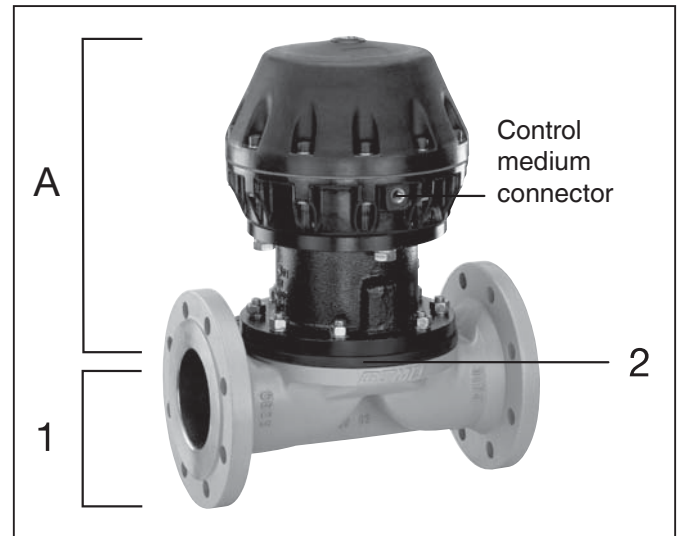

Construction

1	Valve body
2	Diaphragm
A	Actuator

9.1 Type plate

Device version Design in accordance with order data

Device-specific data

GEMÜ Fritz-Müller-Str. 6-8 D-74663 Ingelfingen	620 80D 8 82913/3	PS 7,0 bar PST 5,6- 7,0 bar	Year of manufacture	
	ERE DE 2020			CE
	88663742 12103529 0001	Traceability number		Serial number
	Item number			

The month of manufacture is encoded in the traceability number and can be obtained from GEMÜ.

The product was manufactured in Germany.

10 Installation and operation

Prior to installation:

- Ensure that valve body and diaphragm material are appropriate and compatible to handle the working medium. See chapter 5 "Technical data".

10.1 Installing the valve

⚠ WARNING

The equipment is subject to pressure!

- Risk of severe injury or death!
- Only work on depressurized plant.

⚠ WARNING



Corrosive chemicals!

- Risk of caustic burns!
- Wear appropriate protective gear when installing.

⚠ CAUTION



Hot plant components!

- Risk of burns!
- Only work on plant that has cooled down.

⚠ WARNING



Actuator under spring pressure.

- Risk of severe injury or death!
- Only open the actuator under a press.

⚠ CAUTION

Never use the valve as a step or an aid for climbing!

- This entails the risk of slipping-off or damaging the valve.

CAUTION

Do not exceed the maximum permissible pressure!

- Take precautionary measures to avoid possible pressure surges (water hammer).

- Installation work must only be performed by trained personnel.

- Use appropriate protective gear as specified in plant operator's guidelines.

Installation location:

⚠ CAUTION

- Do not apply external force to the valve.
- Choose the installation location so that the valve cannot be used as a foothold (climbing aid).
- Lay the pipeline so that the valve body is protected against transverse and bending forces, and also vibrations and tension.
- Only mount the valve between matching aligned pipes.

- x Direction of the working medium: optional.
- x Mounting position of the valve: optional.

Installation:


1. Ensure the suitability of the valve for each respective use. The valve must be appropriate for the piping system operating conditions (medium, medium concentration, temperature and pressure) and the prevailing ambient conditions. Check the technical data of the valve and the materials.
2. Shut off plant or plant component.
3. Secure against recommissioning.
4. Depressurize the plant or plant component.
5. Completely drain the plant (or plant component) and let it cool down until the temperature is below the media vaporization temperature and scalding can be ruled out.
6. Correctly decontaminate, rinse and ventilate the plant or plant component.

Installation - Threaded connections:

- Screw the threaded connections into the piping in accordance with valid standards.
- Screw the valve body into the piping, use appropriate thread sealant. The thread sealant is not included in the scope of delivery.

Installation - Flange connection:

1. Pay attention to clean, undamaged sealing surfaces on the mating flanges.
2. Align flanges carefully before installing them.
3. Centre the seals accurately.
4. Connect the valve flange and the piping flange using appropriate sealing material and matching bolting. Sealing material and bolts are not included in the scope of delivery.
5. Use all flange holes.
6. Only use connector elements made of approved materials!
7. Tighten the bolts diagonally!

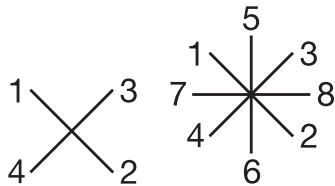

Observe appropriate regulations for connections!

After the installation:

- Reactivate all safety and protective devices.

10.2 Control functions

The following control functions are available:

Control function 1 Normally closed (NC)


Valve resting position: closed by spring force. Activation of the actuator (connector 2) opens the valve. When the actuator is vented, the valve is closed by spring force.

Control function 2 Normally open (NO)

Valve resting position: opened by spring force. Activation of the actuator (connector 4) closes the valve. When the actuator is vented, the valve is opened by spring force.


Control function 3 Double acting (DA)

Valve resting position: no defined normal position. The valve is opened and closed by activating the respective control medium connectors (connector 2: open / connector 4: close).

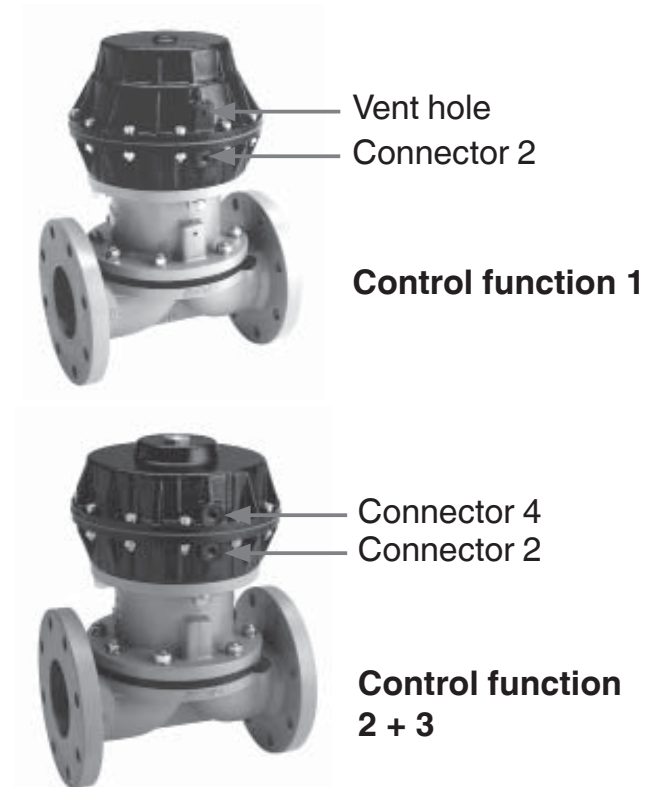

Control function	Connectors	
	2	4
1 (NC)	+	-
2 (NO)	-	+
3 (DA)	+	+
+ = available / - = not available (for connectors 2 / 4 see photos above)		


10.3 Connecting the control medium

 **Important:**
Connect the control medium lines tension-free and without any bends or knots! Use appropriate connectors according to the application.

Thread size of the control medium connector:
G1/4


Control function		Connectors
1	Normally closed (NC)	2: Control medium (open)
2	Normally open (NO)	4: Control medium (close)
3	Double acting (DA)	2: Control medium (open) 4: Control medium (close)
For connectors 2 / 4 see photos on page 29		

11 Assembly / disassembly of spare parts

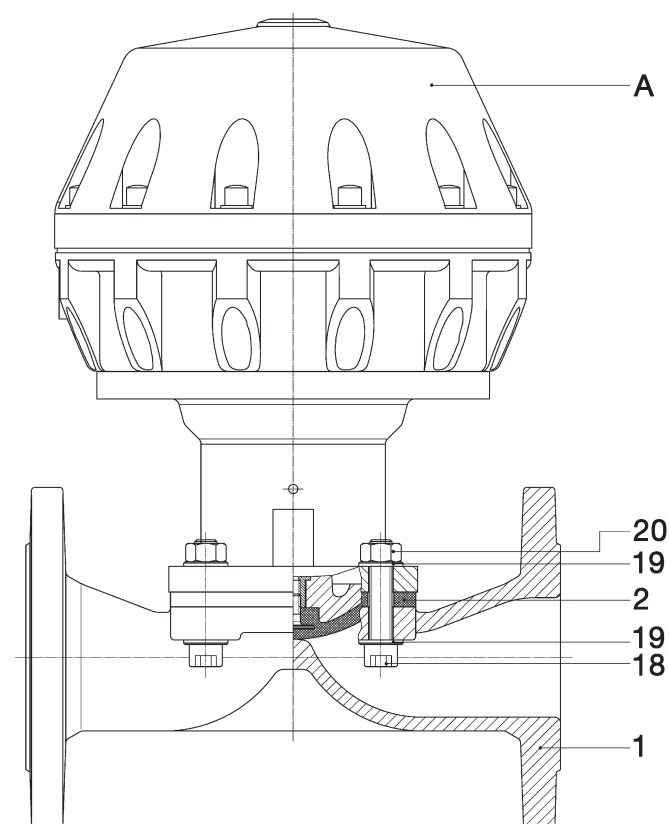


11.1 Valve disassembly (removing actuator from body)

1. Move actuator **A** to the open position.
2. Remove actuator **A** from valve body **1**.
3. Move actuator **A** to the closed position.

 **Important:**
After disassembly, clean all parts of contamination (do not damage parts). Check parts for potential damage, replace if necessary (only use genuine parts from GEMÜ).

11.2 Removing the diaphragm

 **Important:**
Before removing the diaphragm, please remove the actuator, see "Valve disassembly (removing actuator from body)".

1. Unscrew the diaphragm **2**.
2. Clean all parts of the remains of product and contamination. Do not scratch or damage parts during cleaning!
3. Check all parts for potential damage.
4. Replace damaged parts (only use genuine parts from GEMÜ).

11.3 Mounting the diaphragm

11.3.1 General information

**Important:**

Mount the correct diaphragm that suits the valve (suitable for medium, medium concentration, temperature and pressure). The diaphragm is a wearing part. Check the technical condition and function of the valve before commissioning and during the whole term of use. Carry out checks regularly and determine the check intervals in accordance with the conditions of use and / or the regulatory codes and provisions applicable for this application.

**Important:**

If the diaphragm is not screwed into the adapter far enough, the closing force is transmitted directly onto the diaphragm pin and not via the compressor. This will cause damage and early failure of the diaphragm and thus leakage of the valve. If the diaphragm is screwed in too far no perfect sealing at the valve seat will be achieved. The function of the valve is no longer ensured.

**Important:**

Incorrectly mounted diaphragm may cause valve leakage / emission of medium. In this case remove the diaphragm, check the complete valve and diaphragm and reassemble again proceeding as described above.

Diaphragm sizes 25 - 50 (DN 15 - 50):

Compressor and actuator flange seen from below:



Place the compressor loosely on the actuator spindle, fit the grooves into the guides (arrows).

Diaphragm sizes 65, 80 (DN 65, 80):

Compressor and actuator flange seen from below:



Diaphragm sizes 100, 125 (DN 100, 125):

Compressor and actuator flange seen from below:



Diaphragm sizes 25-50 (DN 15-50):

The compressor is loose.

Diaphragm sizes 65-150 (DN 65-150):


The compressor is fixed to the spindle.

Diaphragm size 150 (DN 150):

Compressor and actuator flange seen from below:




11.3.2 Mounting a concave diaphragm

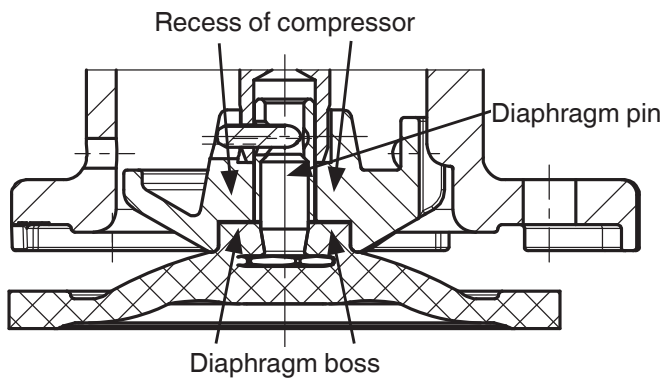


1. Move actuator **A** to the closed position.
2. Diaphragm sizes 25-50 (DN 15-50): Place the compressor loosely on the actuator spindle, fit the grooves into the guides (see chapter 11.3.1 "General information").
3. Check if the compressor fits closely in the guides.
4. Screw new diaphragm tightly into the compressor manually.
5. Check if the diaphragm boss fits closely in the recess of the compressor.
6. If it is difficult to screw it in, check the thread, replace damaged parts (only use genuine parts from GEMÜ).
7. When clear resistance is felt turn back the diaphragm anticlockwise until its bolt holes are in correct alignment with the bolt holes of the actuator.

11.3.3 Mounting a convex diaphragm

1. Move actuator **A** to the closed position.
2. Diaphragm sizes 25-50 (DN 15-50): Place the compressor loosely on the actuator spindle, fit the grooves into the guides (see chapter 11.3.1 "General information").
3. Check if the compressor fits closely in the guides.
4. Invert the new diaphragm face manually; use a clean, padded mat with bigger nominal sizes.

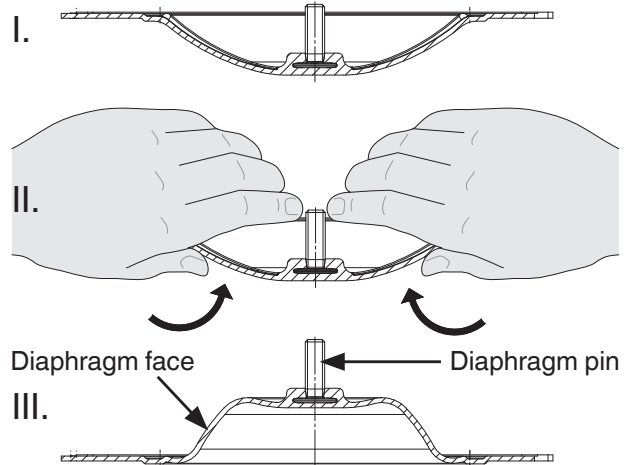

5. Position the new backing diaphragm onto the compressor.
6. Position the diaphragm face onto the backing diaphragm.
7. Screw diaphragm face tightly into the compressor manually. The diaphragm boss must fit closely in the recess of the compressor.

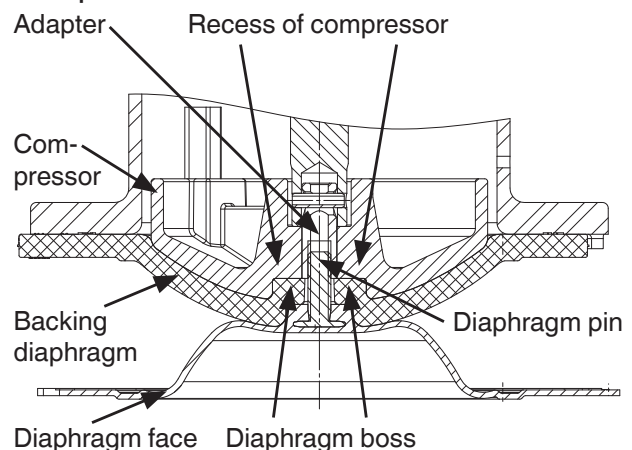


8. If it is difficult to screw it in, check the thread, replace damaged parts.
9. When clear resistance is felt turn back the diaphragm anticlockwise until its bolt holes are in correct alignment with the bolt holes of the actuator.

- Press the diaphragm face tightly onto the backing diaphragm manually so that it returns to its original shape and fits closely on the backing diaphragm.

11.4 Actuator mounting on the valve body

- Move actuator **A** to the open position.
- Position actuator **A** with the mounted diaphragm **2** on the valve body **1**, aligning the diaphragm weir and valve body weir.
- Insert and tighten the bolts **18**, washers **19** and nuts **20** by hand (hand tight only).
- Move actuator **A** to the closed position.
- Fully tighten the bolts **18** with nuts **20** diagonally.

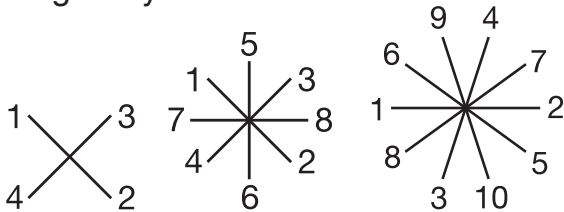

- Ensure that the diaphragm **2** is compressed evenly (approx. 10-15 %, visible by an even bulge to the outside).
- Check tightness of completely assembled valve.

	<p>Important:</p> <p>Diaphragms set in the course of time. After valve installation and commissioning you must retighten the bolts 18 and nuts 20 (see chapter 19 "Sectional drawings and spare parts").</p>
--	---

12 Commissioning

⚠ WARNING	
	<p>Corrosive chemicals!</p> <ul style="list-style-type: none"> ➤ Risk of caustic burns! ● Check the tightness of the media connections prior to commissioning! ● Use only the appropriate protective gear when performing the tightness check.

⚠ CAUTION	
<p>Protect against leakage!</p> <ul style="list-style-type: none"> ● Provide precautionary measures against exceeding the maximum permitted pressures caused by pressure surges (water hammer). 	

Prior to cleaning or commissioning the plant:

- Check the tightness and the function of the valve (close and reopen the valve).
- If the plant is new and after repairs rinse the piping system with a fully opened valve (to remove any harmful foreign matter).

Cleaning:

- x The plant operator is responsible for selecting the cleaning material and performing the procedure.

13 Inspection and servicing

⚠ WARNING	
<p>The equipment is subject to pressure!</p> <ul style="list-style-type: none"> ➤ Risk of severe injury or death! ● Only work on depressurized plant. 	

⚠ CAUTION	
	<p>Hot plant components!</p> <ul style="list-style-type: none"> ➤ Risk of burns! ● Only work on plant that has cooled down.

⚠ CAUTION

- Servicing and maintenance work may only be performed by trained personnel.
- GEMÜ shall assume no liability whatsoever for damages caused by improper handling or third-party actions.
- In case of doubt, contact GEMÜ before commissioning.

1. Use appropriate protective gear as specified in plant operator's guidelines.
2. Shut off plant or plant component.
3. Secure against recommissioning.
4. Depressurize the plant or plant component.

The operator must carry out regular visual examination of the valves dependent on the operating conditions and the potential danger in order to prevent leakage and damage. The valve also has to be disassembled in the corresponding intervals and checked for wear (see chapter 11 "Assembly / Disassembly of spare parts").

14 Disassembly

Disassembly is performed observing the same precautionary measures as for installation.


- Disassemble the valve (see chapter 11.1 "Valve disassembly (removing actuator from body)").

15 Disposal



- All valve parts must be disposed of according to relevant local or national disposal regulations / environmental protection laws.
- Pay attention to adhered residual material and gas diffusion from penetrated media.

15.1 Disassembly for disposal for control function 1

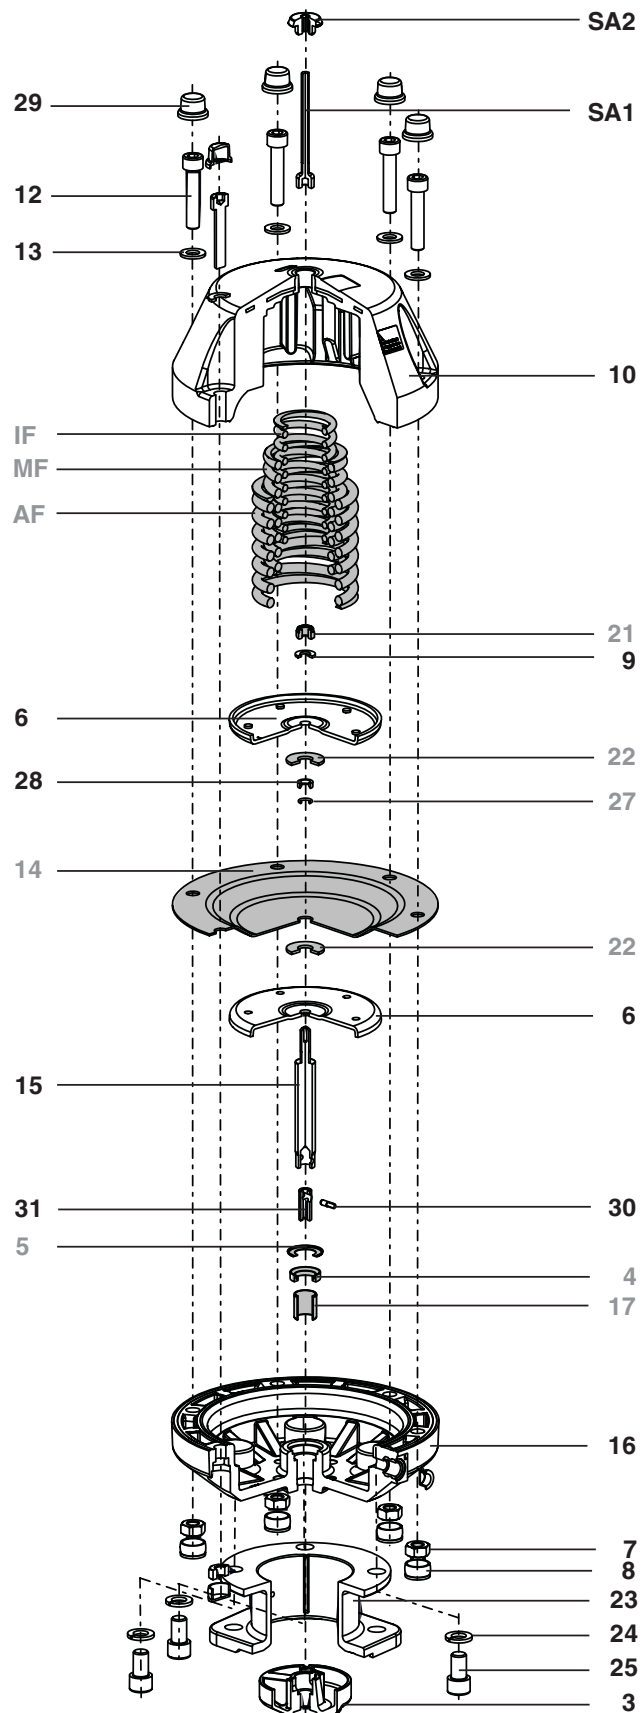

⚠ WARNING



Actuator under spring pressure!

- Risk of severe injury or death!
- Only open the actuator under a press.

1. Separate actuator from control medium.
2. Remove loose compressor **3**.
3. Remove protective cap **SA2**.
4. Remove optical position indicator **SA1**.
5. Remove protective caps **29**.
6. Clamp actuator in a press.

CAUTION

Applied pressure too high!

- Risk of breakage of actuator top **10**!
- Only use minimum required pressure.

7. Undo and remove bolts **12** with washers **13** between actuator top **10** and actuator base **16**.
8. Slowly release the press.
9. Remove actuator top **10**.
10. Remove spring set comprising compression springs **IF**, **MF** and **AF**, from actuator base **16**.

16 Returns

- Clean the valve.
- Request a goods return declaration form from GEMÜ.
- Returns must be made with a completed declaration of return.

If not completed, GEMÜ cannot process
x credits or
x repair work
but will dispose of the goods at the operator's expense.



Note for returns:

Legal regulations for the protection of the environment and personnel require that the completed and signed goods return declaration is included with the dispatch documents. Returned goods can be processed only when this declaration is completed.

17 Information



Note on Directive 2014/34/EU (ATEX Directive):

A supplement to Directive 2014/34/EU is included with the product if it was ordered according to ATEX.



Note on staff training:

Please contact us at the address on the last page for staff training information.

Should there be any doubts or misunderstandings in the preceding text, the German version of this document is the authoritative document!


18 Troubleshooting / Fault clearance

Fault	Possible cause	Fault clearance
Control medium escapes from vent hole* in the actuator cover (for control function NC) or from connector 2* (for control function NO)	Actuator membrane faulty	Replace actuator
Control medium escapes from leak detection hole*	Spindle seal leaking	Replace actuator and check control medium for impurities
Working medium escapes from leak detection hole*	Valve diaphragm faulty	Check valve diaphragm for damage, replace diaphragm if necessary
Control medium escapes at the actuator membrane*	Connecting bolts between actuator cover and base are loose	Retighten bolts professionally diagonally
Valve doesn't open or doesn't open fully	Control pressure too low (for control function NC)	Operate valve with control pressure specified in data sheet
	Pilot valve faulty	Check and replace pilot valve
	Control medium not connected	Connect control medium
	Valve diaphragm incorrectly mounted	Remove actuator, check diaphragm mounting, replace if necessary
Valve leaks downstream (doesn't close or doesn't close fully)	Actuator spring faulty (for control function NO)	Replace actuator
	Operating pressure too high	Operate valve with operating pressure specified in data sheet
	Control pressure too low (for control function NO and control function DA)	Operate valve with control pressure specified in data sheet
	Foreign matter between valve diaphragm and valve body weir	Remove actuator, remove foreign matter, check valve diaphragm and valve body weir for damage and replace if necessary
	Valve body weir leaking or damaged	Check valve body weir for damage, if necessary replace valve body
	Valve diaphragm faulty	Check valve diaphragm for damage, replace diaphragm if necessary
Valve leaks between actuator and valve body	Actuator spring faulty (for control function NC)	Replace actuator
	Valve diaphragm incorrectly mounted	Remove actuator, check diaphragm mounting, replace if necessary
	Bolting between valve body and actuator loose	Retighten bolting between valve body and actuator
	Valve diaphragm faulty	Check valve diaphragm for damage, replace diaphragm if necessary
Valve body connection to piping leaks	Actuator / valve body damaged	Replace actuator / valve body
	Incorrect installation	Check installation of valve body in piping
	Threaded connections / bolting loose	Tighten threaded connections / bolting
Valve body leaks	Sealing material faulty	Replace sealing material
	Valve body faulty or corroded	Check valve body for damage, replace valve body if necessary


* see chapter 10.2 "Control functions" and chapter 19 "Sectional drawings and spare parts"

19 Sectional drawings and spare parts

Diaphragm sizes 25 - 80

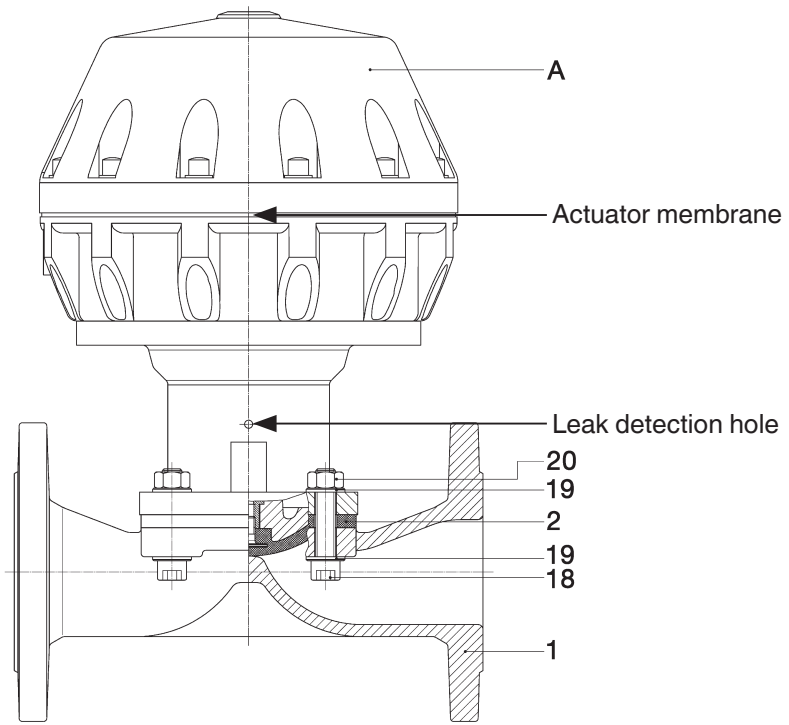

Diaphragm sizes 100 - 150

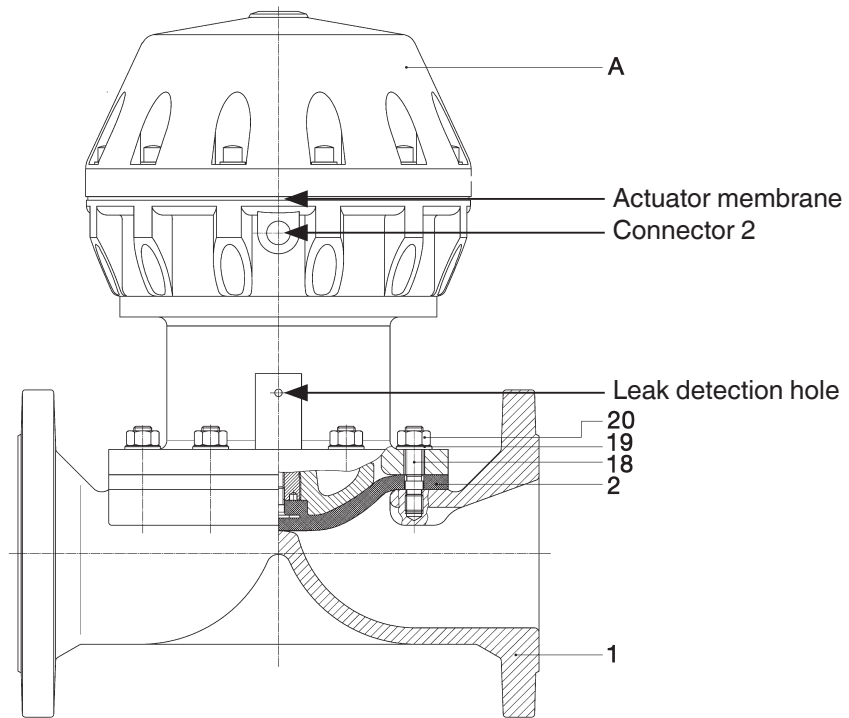

Item	Name	Order description
1	Valve body	K600... (DN 15-50)
		K620... (from DN 65)
2	Diaphragm	600...M... (DN 15-50)
		620...M... (from DN 65)
18	Bolt	} 620...S30...
19	Washer	
20	Nut	
A	Actuator	9620...

Declaration of Incorporation

according to the EC Machinery Directive 2006/42/EC, Annex II, 1.B
for partly completed machinery

Manufacturer: GEMÜ Gebr. Müller Apparatebau GmbH & Co. KG
Postfach 30
Fritz-Müller-Straße 6-8
D-74653 Ingelfingen-Criesbach

Description and identification of the partly completed machinery:

Make: GEMÜ Diaphragm valve, pneumatically operated
Serial number: from December 29, 2009
Project number: MV-Pneum-2009-12
Commercial name: Type 620

We hereby declare that the following essential requirements of the Machinery Directive 2006/42/EC have been fulfilled:

1.1.3.; 1.1.5.; 1.1.7.; 1.2.1.; 1.3.; 1.3.2.; 1.3.3.; 1.3.4.; 1.3.7.; 1.3.9.; 1.5.3.; 1.5.5.; 1.5.6.; 1.5.7.; 1.5.8.; 1.5.9.; 1.6.5.; 2.1.1.; 3.2.1.; 3.2.2.; 3.3.2.; 3.4.4.; 3.6.3.1.; 4.1.2.1.; 4.1.2.3.; 4.1.2.4.; 4.1.2.5.; 4.1.2.6. a); 4.1.2.6. b); 4.1.2.6. c); 4.1.2.6. d); 4.1.2.6. e); 4.1.3.; 4.2.1.; 4.2.1.4.; 4.2.2.; 4.2.3.; 4.3.1.; 4.3.2.; 4.3.3.; 4.4.1.; 4.4.2.; 5.3.; 5.4.; 6.1.1.; 6.3.3.; 6.4.1.; 6.4.3.

We also declare that the specific technical documentation has been compiled in accordance with part B of Annex VII.

We expressly declare that the partly completed machinery complies with the relevant provisions of the following EC directives:


2006/42/EC:2006-05-17: (Machinery Directive) Directive 2006/42/EC of the European Parliament and of the Council of 17 May 2006 on machinery, and amending Directive 95/16/EC (recast) (1)

The manufacturer or his authorised representative undertake to transmit, in response to a reasoned request by the national authorities, relevant information on the partly completed machinery. This transmission takes place:

electronically

This does not affect the intellectual property rights!

Important note! The partly completed machinery may be put into service only if it was determined, where appropriate, that the machinery into which the partly completed machinery is to be installed meets the provisions of this Directive.

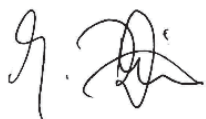

Joachim Brien
Head of Technical Department

Ingelfingen-Criesbach, February 2013

Declaration of Conformity

According of the Directive 2014/68/EU

Hereby we, **GEMÜ Gebr. Müller Apparatebau GmbH & Co. KG**
Fritz-Müller-Straße 6-8
D-74653 Ingelfingen

declare that the equipment listed below complies with the safety requirements of the Pressure Equipment Directive 2014/68/EU.

Description of the equipment - product type

Diaphragm Valve
GEMÜ 620


Notified body: TÜV Rheinland Industrie Service GmbH
Number: 0035
Certificate no.: 01 202 926/Q-02 0036
Applied standards: AD 2000

Conformity assessment procedure:
Module H1

Note for equipment with a nominal size \leq DN 25:

The products are developed and produced according to GEMÜ process instructions and quality standards which comply with the requirements of ISO 9001 and of ISO 14001.

According to section 4, paragraph 3 of the Pressure Equipment Directive 2014/68/EU these products must not be identified by a CE-label.

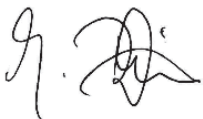

Joachim Brien
Head of Technical Department

Ingelfingen-Criesbach, March 2019



Änderungen vorbehalten · Subject to alteration · 10/2022 · 88262451



GEMÜ®